


Instructions for use

Universal Cross Bars



01

Attach the base to the aluminum bar and place the crossbar in the proper position on the roof.

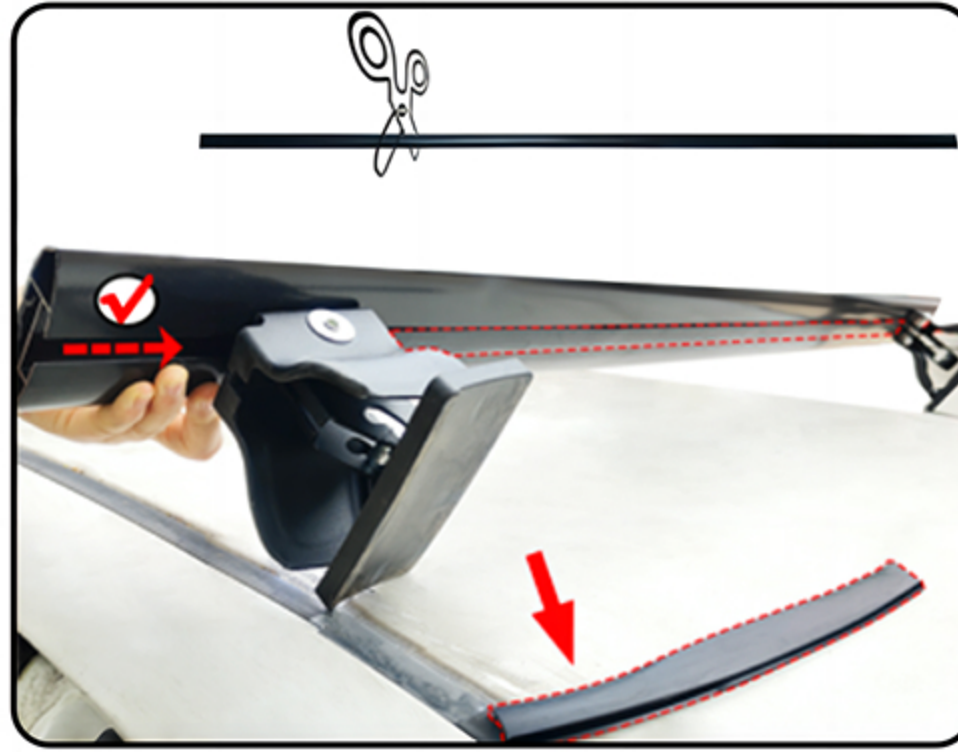

02

Cut the right length of adhesive tape and fill inside the slots underneath the aluminum rods.



03

Pick the right hook for the door frame amplitude.



04

Attach the adhesive pad to the inside of the selected hook.



05

Use the knob assembly to attach the hook to the base.



06

Cover with plugs on both sides.