



RAIDER OVERBUMPER

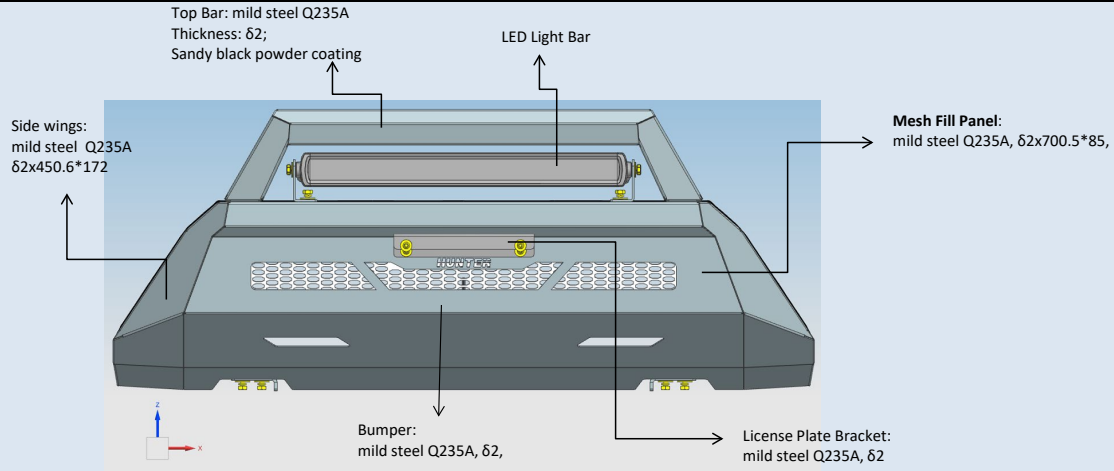

BRONX DESCRIPTION	MEASUREMEN T /CM	GROSS WEIGHT /KG	INSTALLATION INSTRUCTION
PARACHOQUES CON HERRAJE PARA INSTALACION AUTOMOTRIZ	119X47X24	14.5	SPECIFIC INSTALLATION MANUAL.

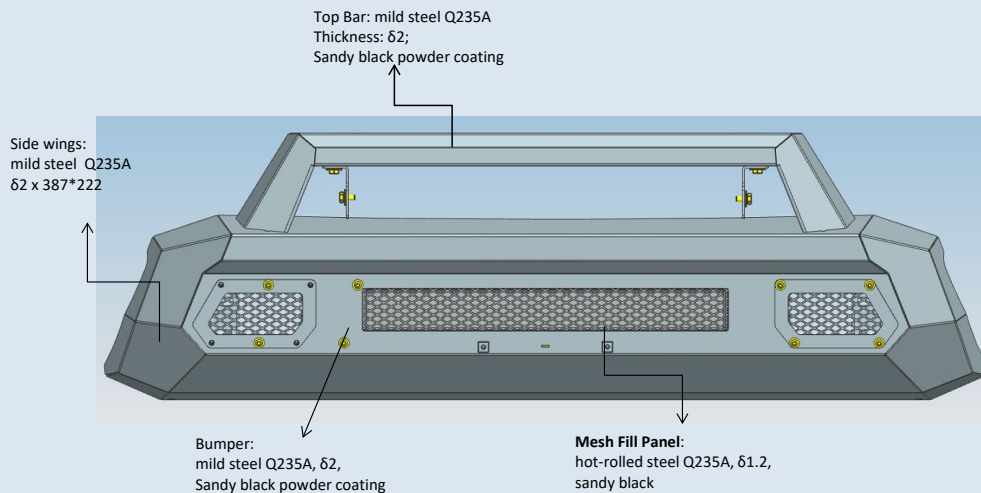

BRONX DESCRIPTION	MEASUREMEN T /CM	GROSS WEIGHT /KG	INSTALLATION INSTRUCTION
PARACHOQUES CON HERRAJE PARA INSTALACION AUTOMOTRIZ	131X48X25	27.5	SPECIFIC INSTALLATION MANUAL.

