

T-STEP WITH BRACKET FOR HILUX REVO

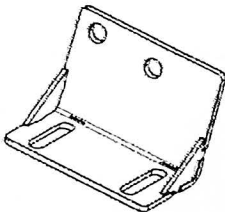
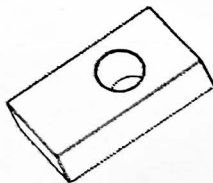
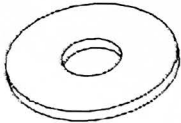
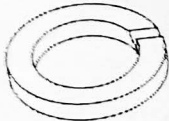

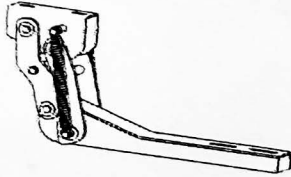


Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

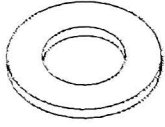
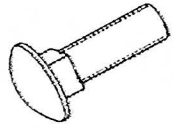

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

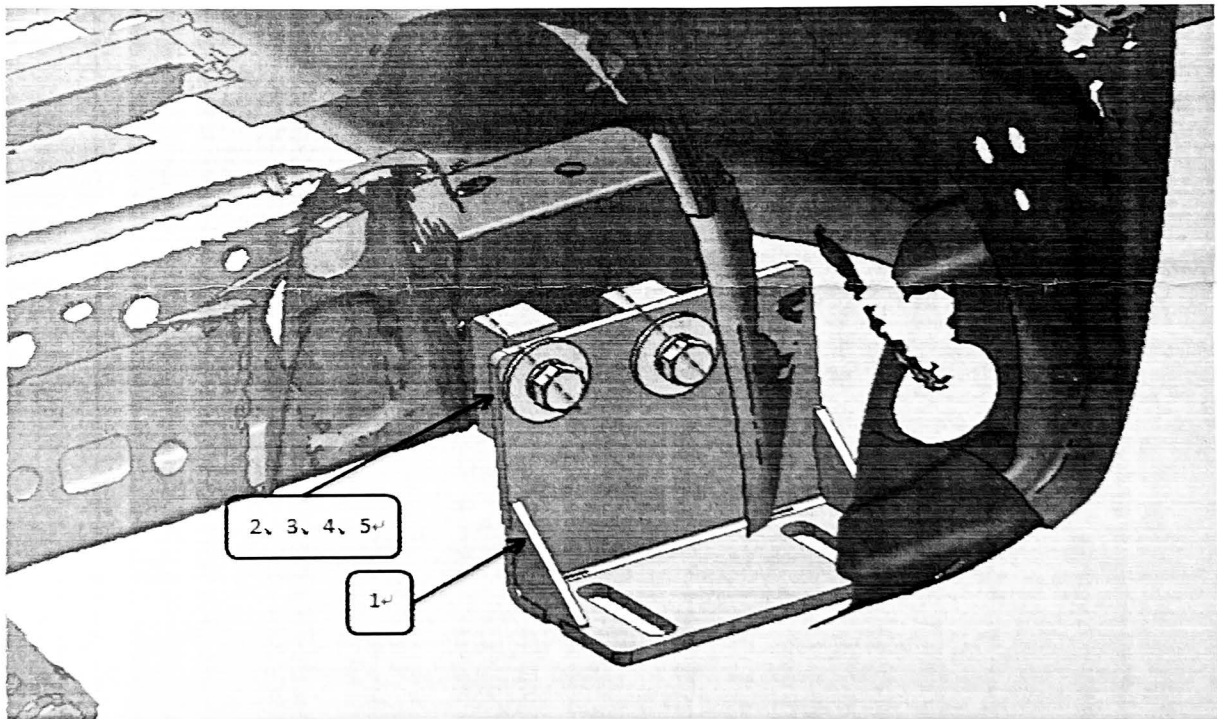
Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Bracket	②	2	 Cushion Bock
③	2	 Large Washer D12	④	2	 Spring Washer D12
⑤	2	 Hex Bolt M12*1.25-60	⑥	1	 Foldable Combination
⑦	1	 Treading Board	⑧	4	 Hex Jam Nut M10

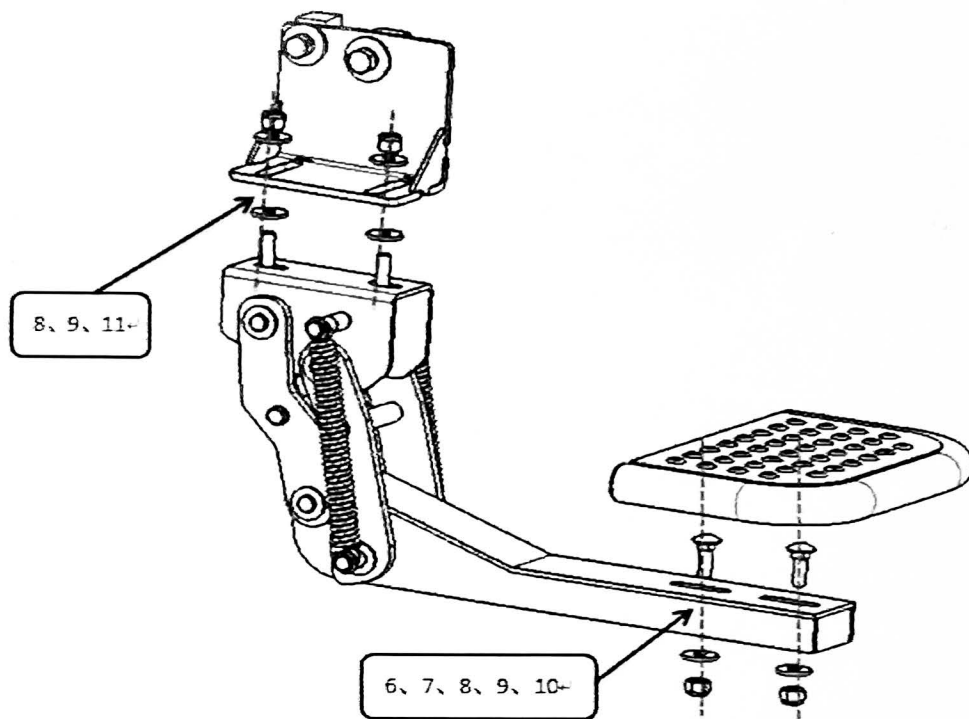
INSTALLATION INSTRUCTIONS

⑨	6	 Flat Washer D10-27	⑩	2	 Square Head Bolt M10-30
⑪	2	 Hex Bolt M10-30			

Installation Fig.



INSTALLATION INSTRUCTIONS



Step 1: Verify that all parts are present according to the manual.

Step 2: Install the brackets on the bottom of vehicle as above picture.

Step 3: Connect the Foldable Combination with the bracket.

Step 3: Check the running board if it install correctly, then tighten all the hardwares.

Step 4: Installation is finished, pick up all tools.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.