

INSTALLATION INSTRUCTION
PART# EWVXAD10; EWVPAD10
PNC SIDE STEP FOR VW AMAROK 17+

NOTICE:

- ≡ The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.
- ≡ Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- ≡ Please periodically check and retighten all the hardware and clean the investment for a refresh look.

PARTS LIST:

No.	Name	Qty	Remarks	No.	Name	Qty	Remarks
①	Side bar	2		⑧	Hex bolt	12	M8-25
②	Front bracket(L)	1		⑨	Large Washer	12	D10
③	Middle rear bracket(L)	1		⑩	Hex Nut	12	M10
④	Rear bracket(L)	1		⑪	Spring Washer	12	D10
⑤	Front bracket(R)	1		⑫	U-bolt-1	2	M10-98
⑥	Middle rear bracket(R)	1		⑬	U-bolt-2	2	M10-41
⑦	Rear bracket(R)	1		⑭	U-bolt-3	2	M10-86

ASSEMBLY PROCEDURE:

Step 1: Remove contents from box. Verify all parts are present. Read instructions carefully before starting installation. Assistance is recommended.

Step 2: Install the brackets. Please tighten all the bolts. (Installation picture.Fig.1)

Step 3: Install the running board on brackets, level and adjust the Running Board and tighten all hardware. (Installation picture. Fig.2)

Step 4: Test and make sure that all hardware is secure and tight. Installation is finished.

INSTALLATION INSTRUCTION
PART# EWVXAD10; EWVPAD10
PNC SIDE STEP FOR VW AMAROK 17+

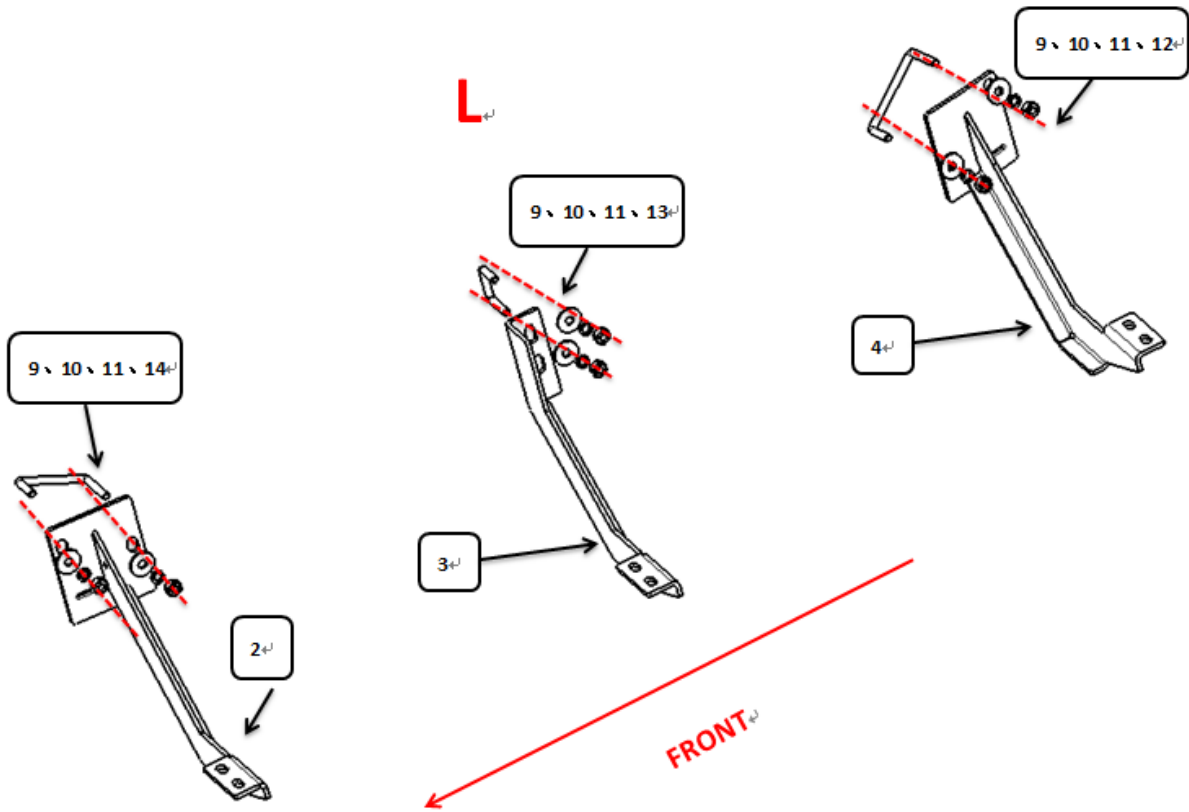


Fig.1

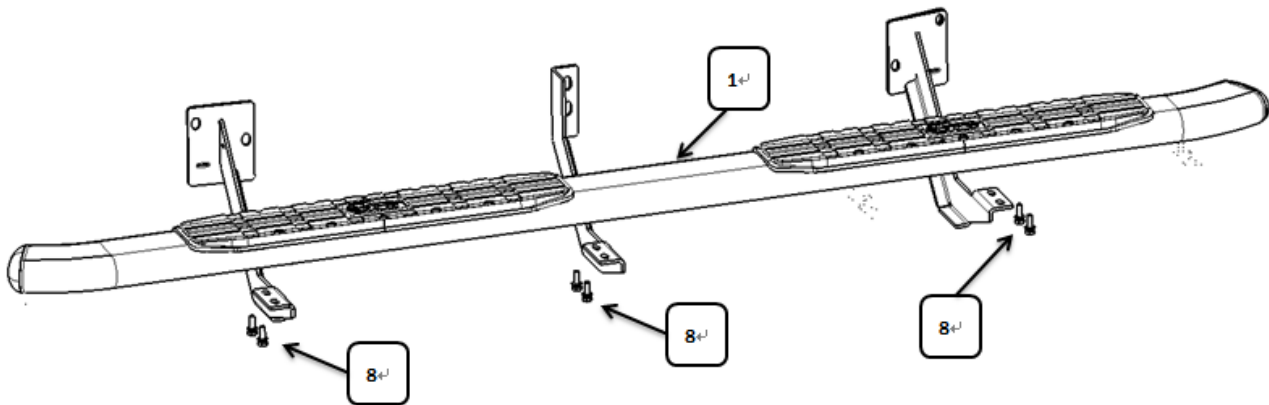


Fig.2

DISCLAIMER: We are not responsible for any quality problems caused by improper installation and use.