

INSTALLATION INSTRUCTIONS

PART# PW039233, PW038883; EWPDC16-B

SANDY BLACK HD2 SIDE BAR WITH BRACKET WITHOUT LOGO FOR NP300 2022+

Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

| NO. | GTY | PIC | NO. | GTY | PIC |
|-----|-----|--|-----|-----|---|
| ① | 1 | A diagram of a long, thin, L-shaped metal bar with a flange on one side and a slot on the other, representing the left side bar. | ② | 1 | A diagram of a long, thin, L-shaped metal bar with a flange on one side and a slot on the other, representing the right side bar. |
| ③ | 3 | A diagram of a metal bracket with a central vertical slot and two horizontal flanges, representing the left bracket. | ④ | 3 | A diagram of a metal bracket with a central vertical slot and two horizontal flanges, representing the right bracket. |
| ⑤ | 12 | A diagram of a small, thin, split lock washer. | ⑥ | 12 | A diagram of a large, flat, split lock washer. |

INSTALLATION INSTRUCTIONS

⑦

12



Hex nut MS

⑧


12



Hex head bolt, spring washer and large washer assembly M8_2S


Installation Steps

Installing picture

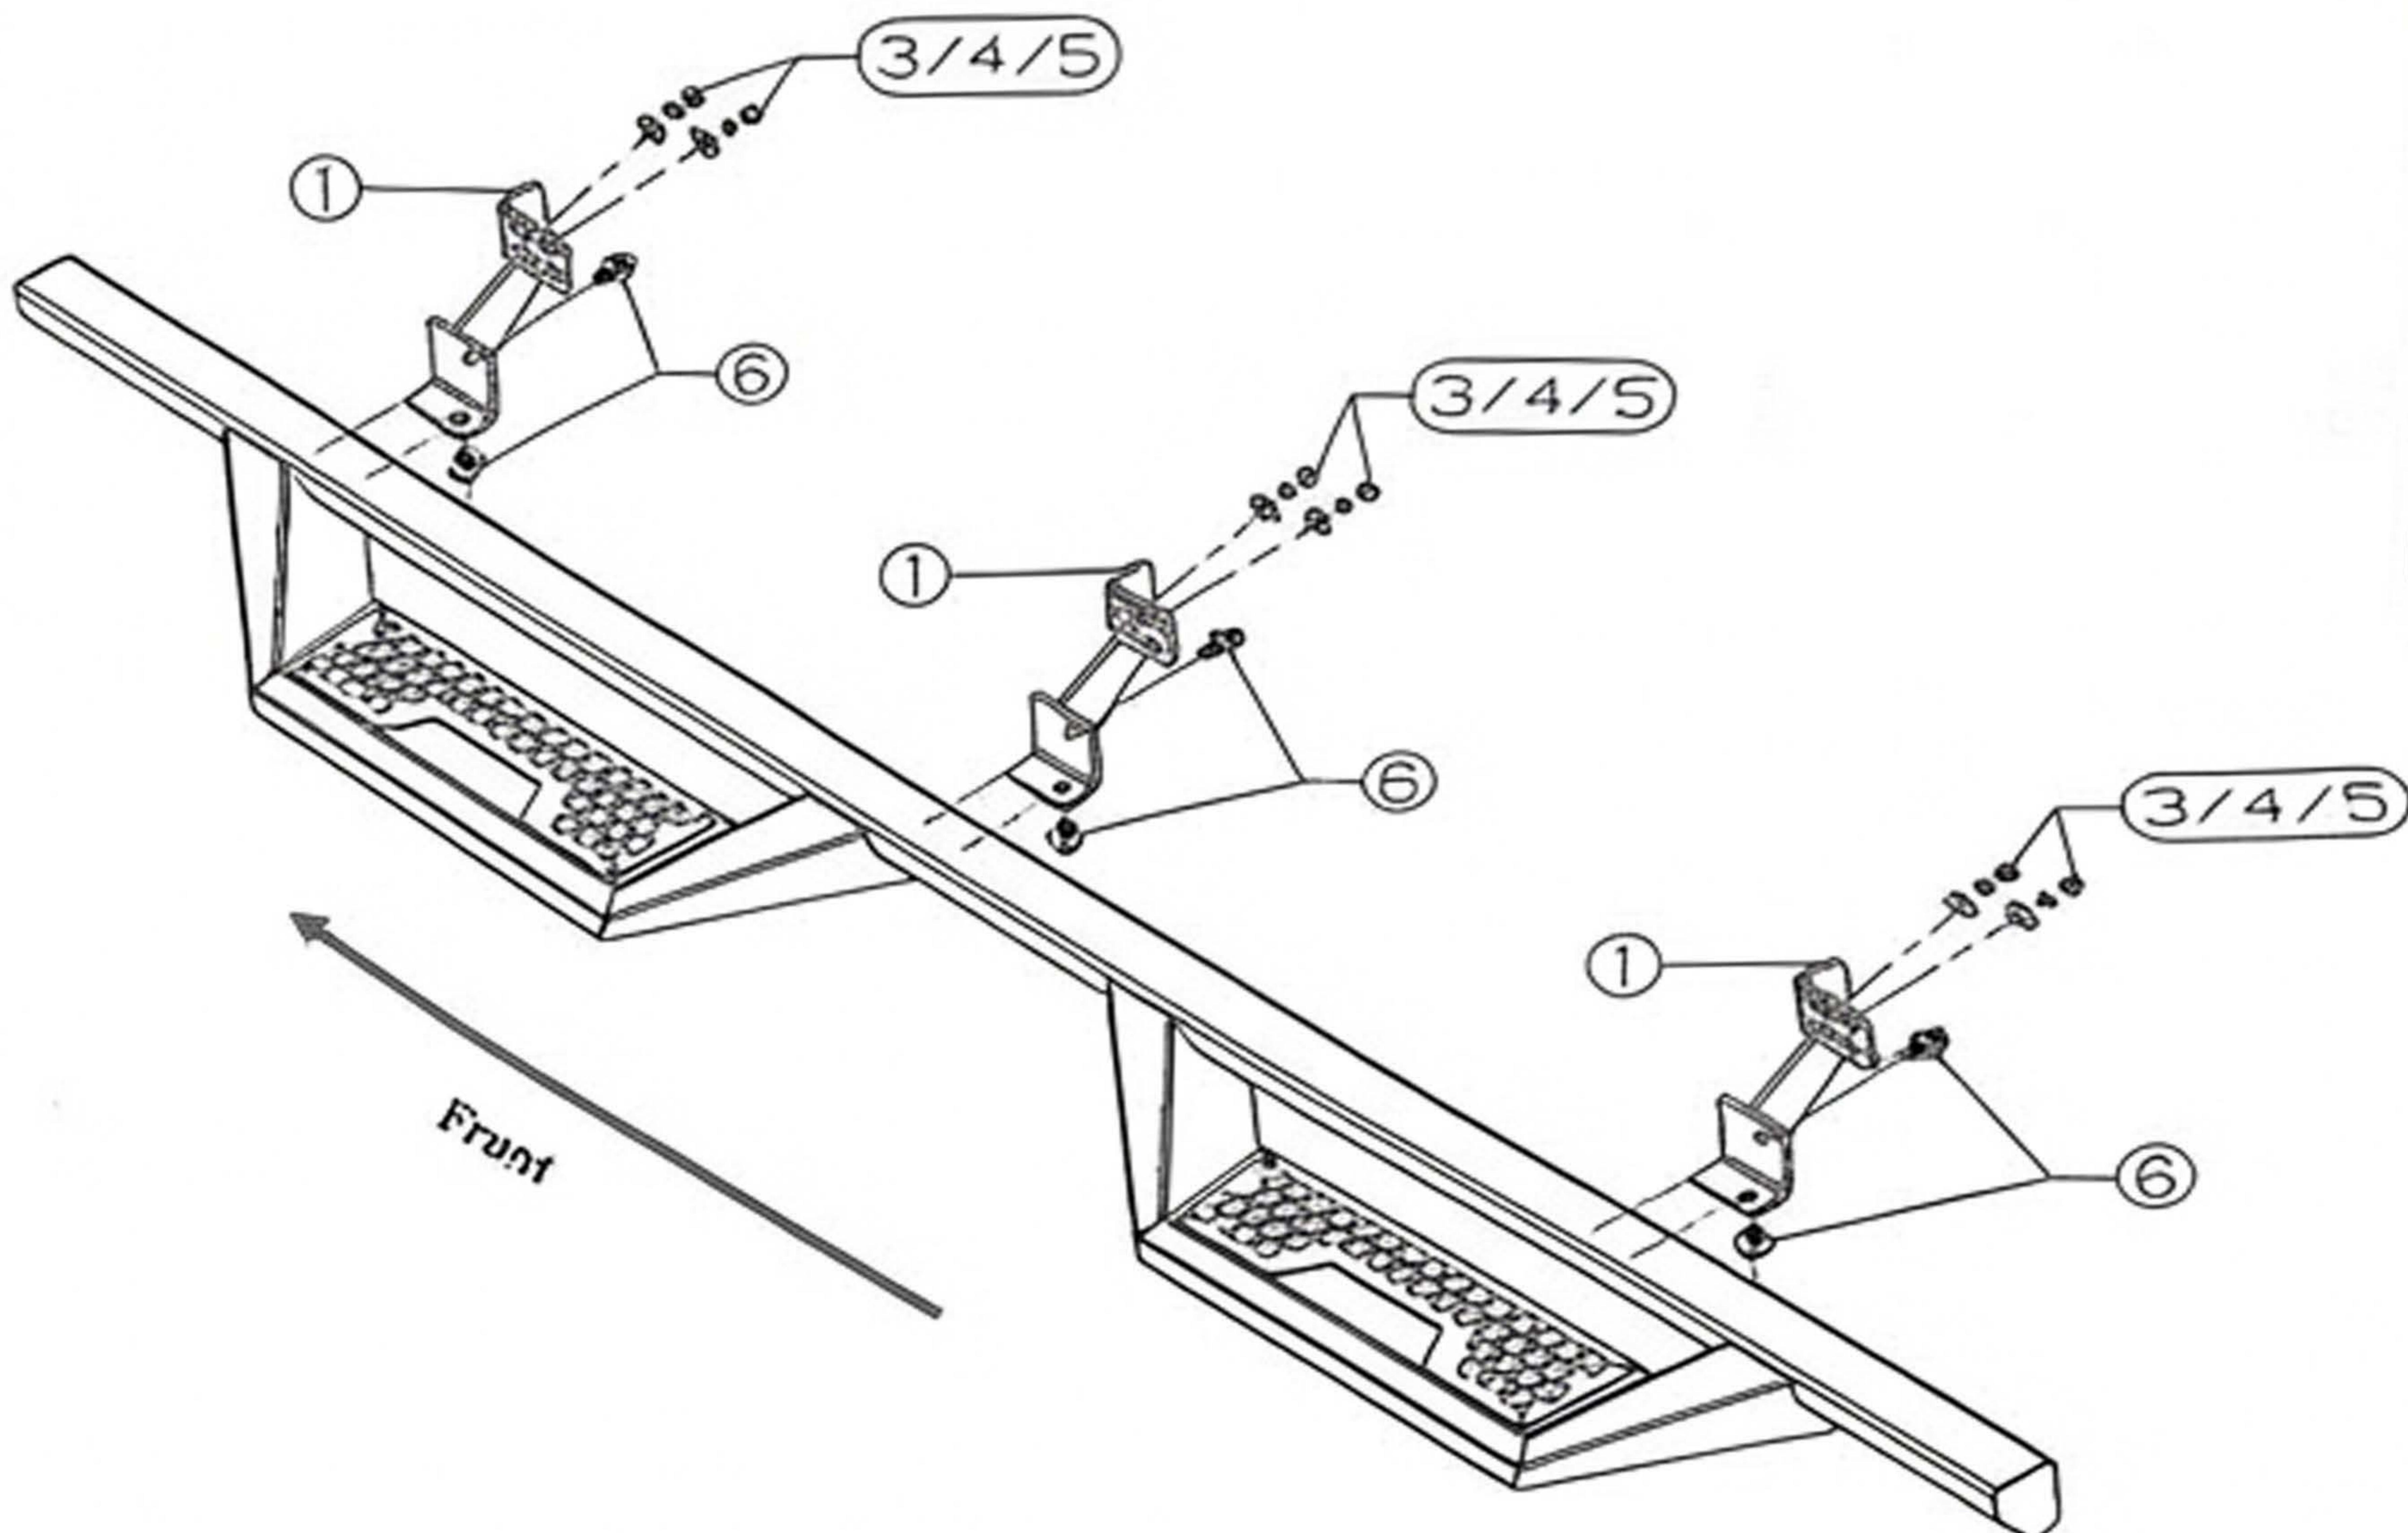


Step 1: Verify that all parts are present according to the manual.


Step 2: Find 3 sets of mounting points with threaded holes on the inside of the original car side.

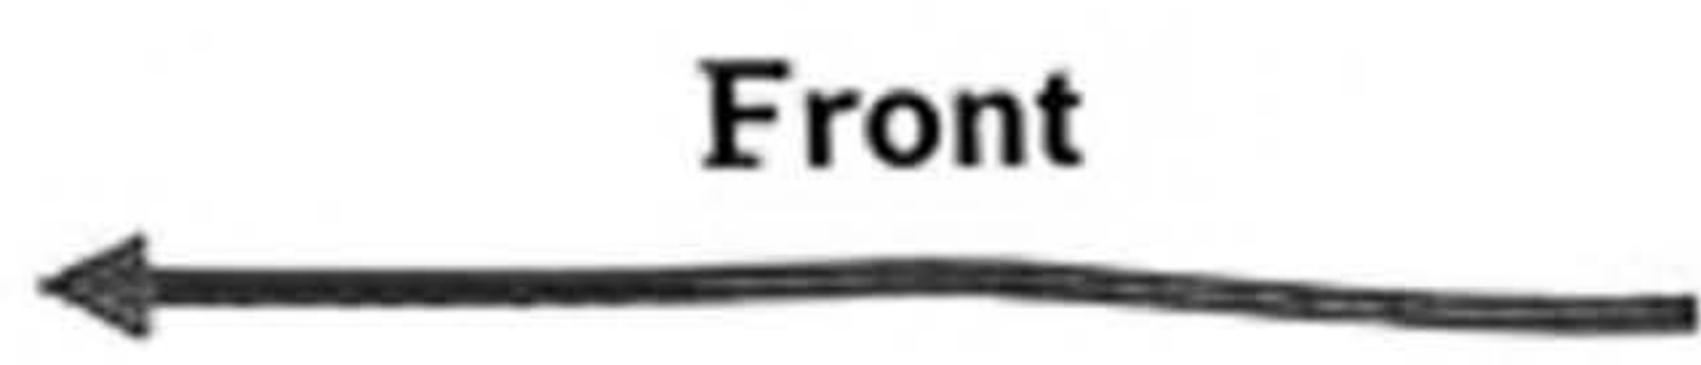

INSTALLATION INSTRUCTIONS

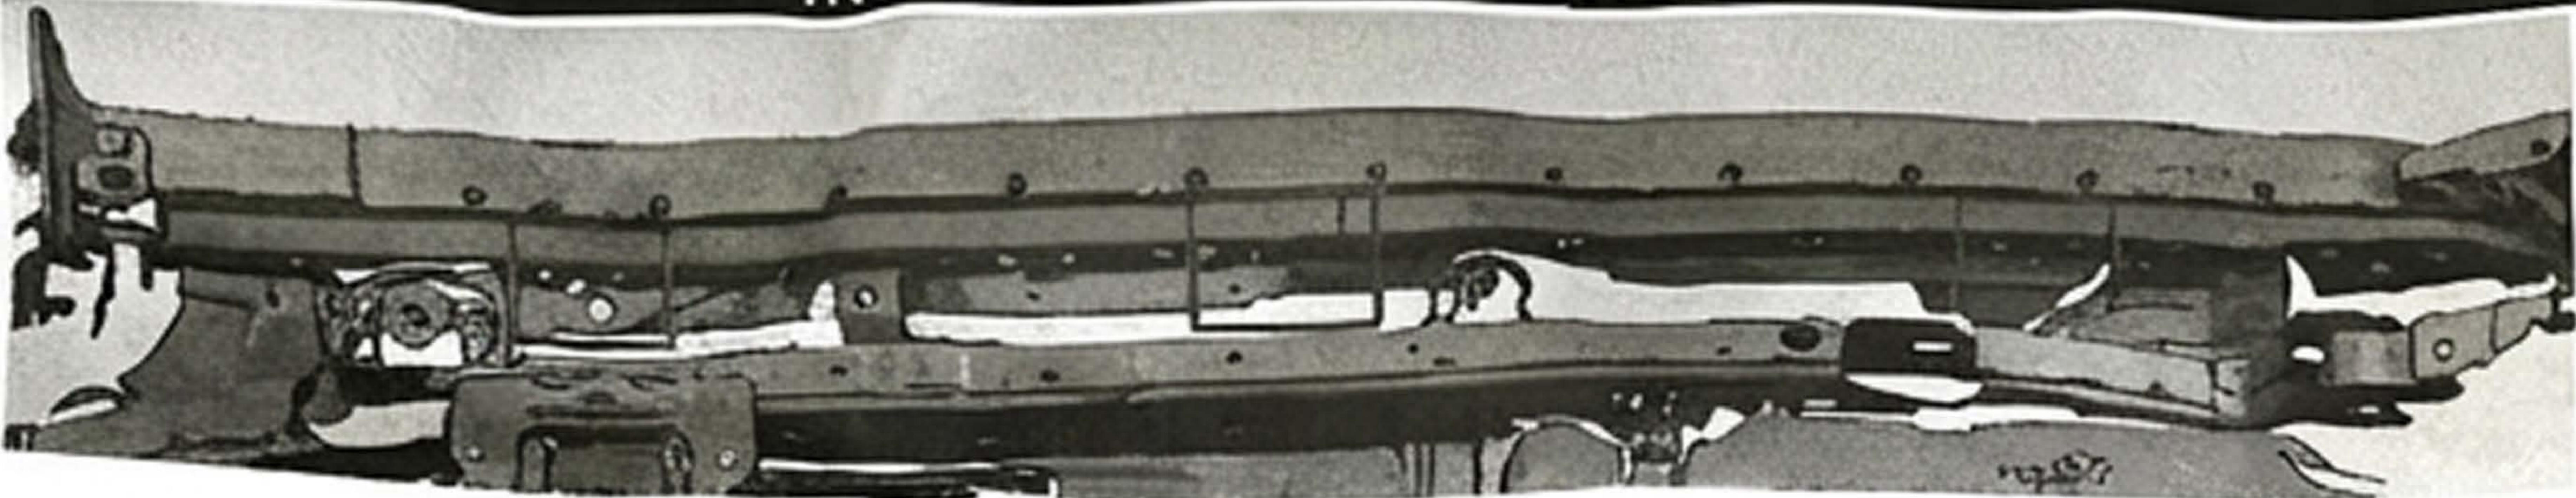

Install the bracket on the original car in turn, and then adjust the side step to a suitable position to install with the bracket, and the left and right are consistent.

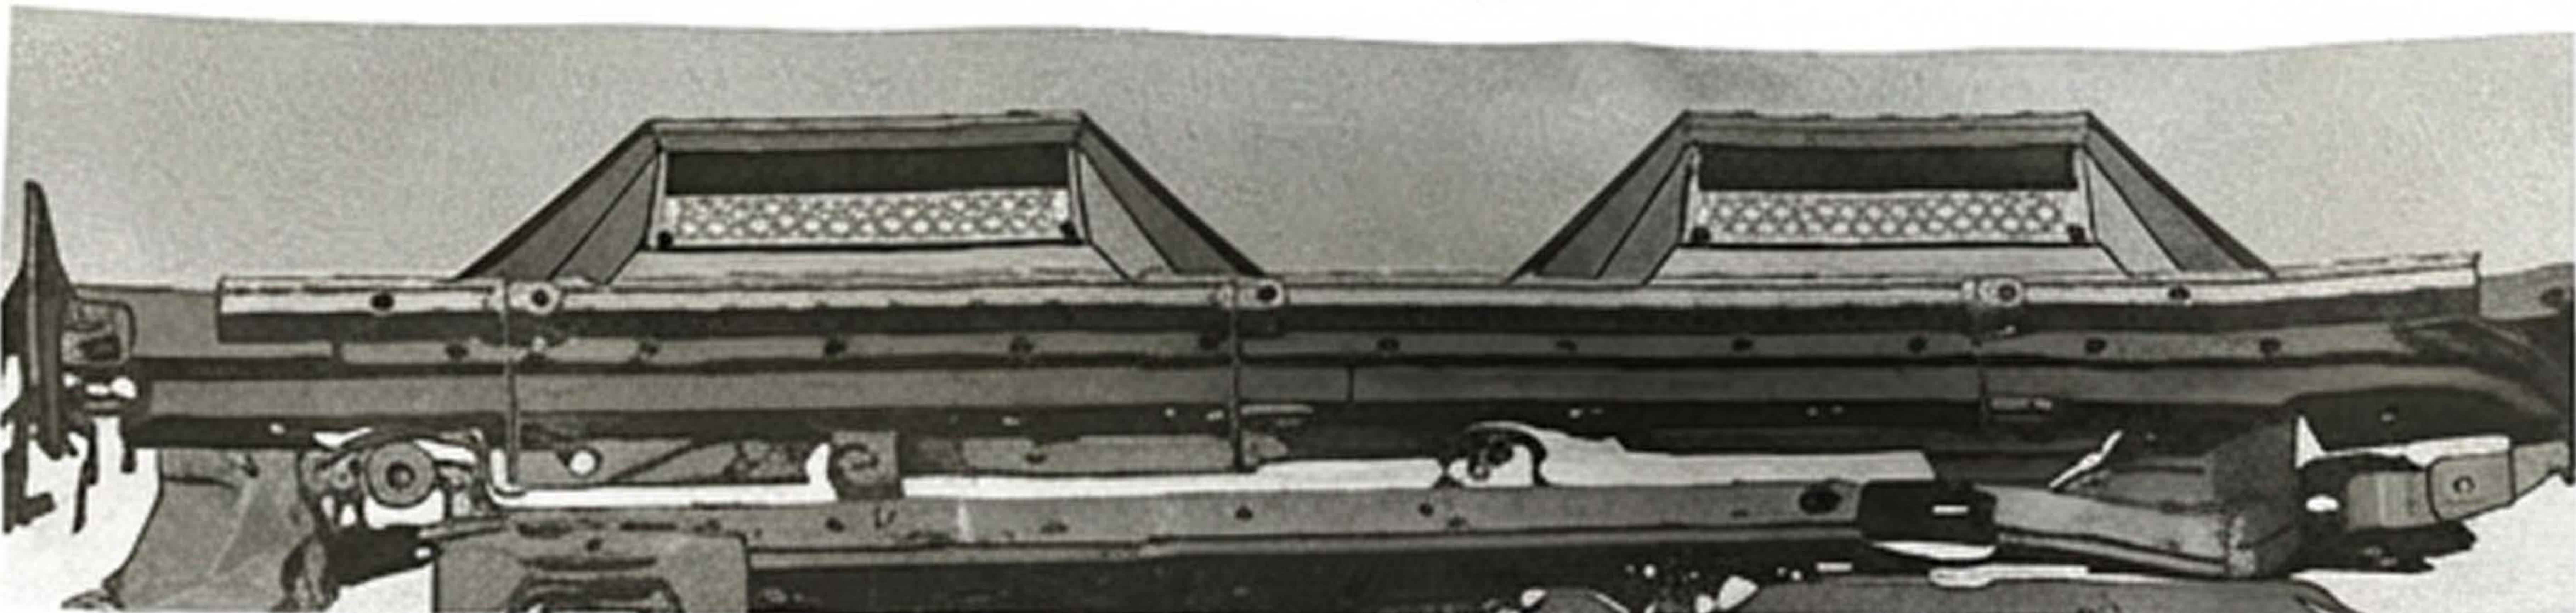

Step 3: Test and make sure that the grille guard is steadily fixed. fully tighten all hardware.

Step 4: Installation is finished, pick up all tools.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.