

## HD2 SIDE STEP FOR RAM CREW CAB 19+







### Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.

### Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.
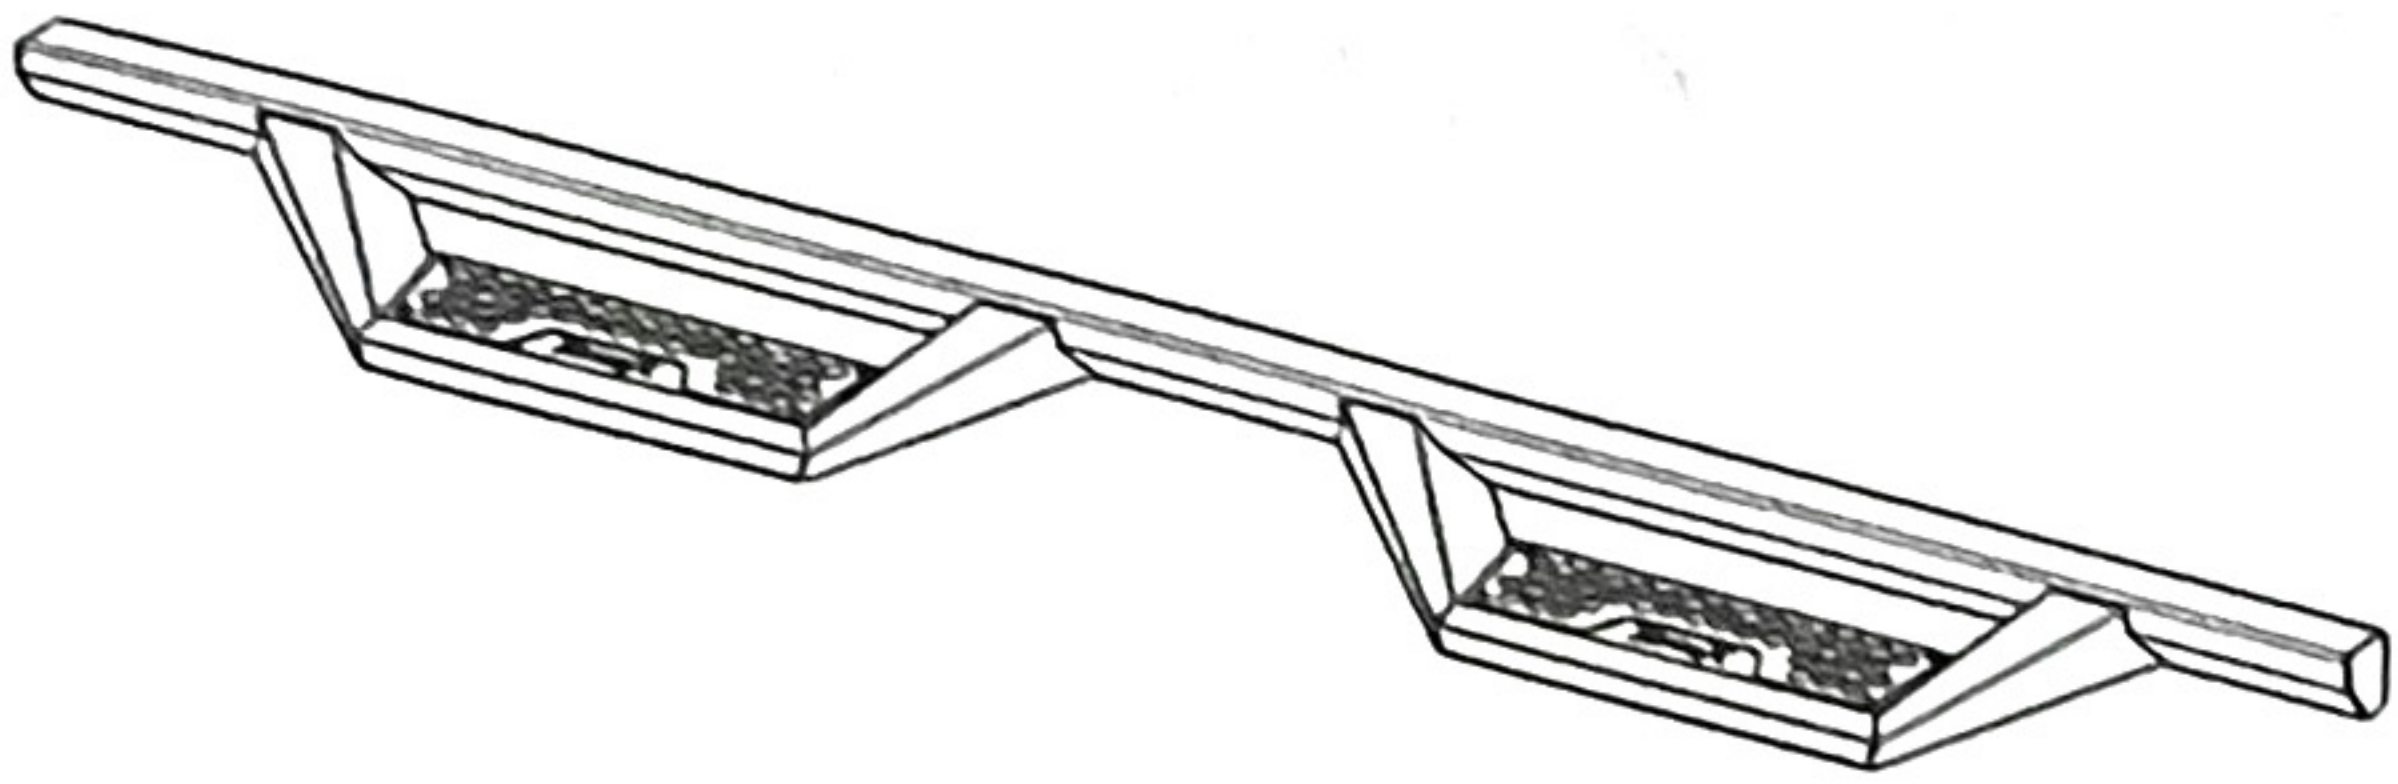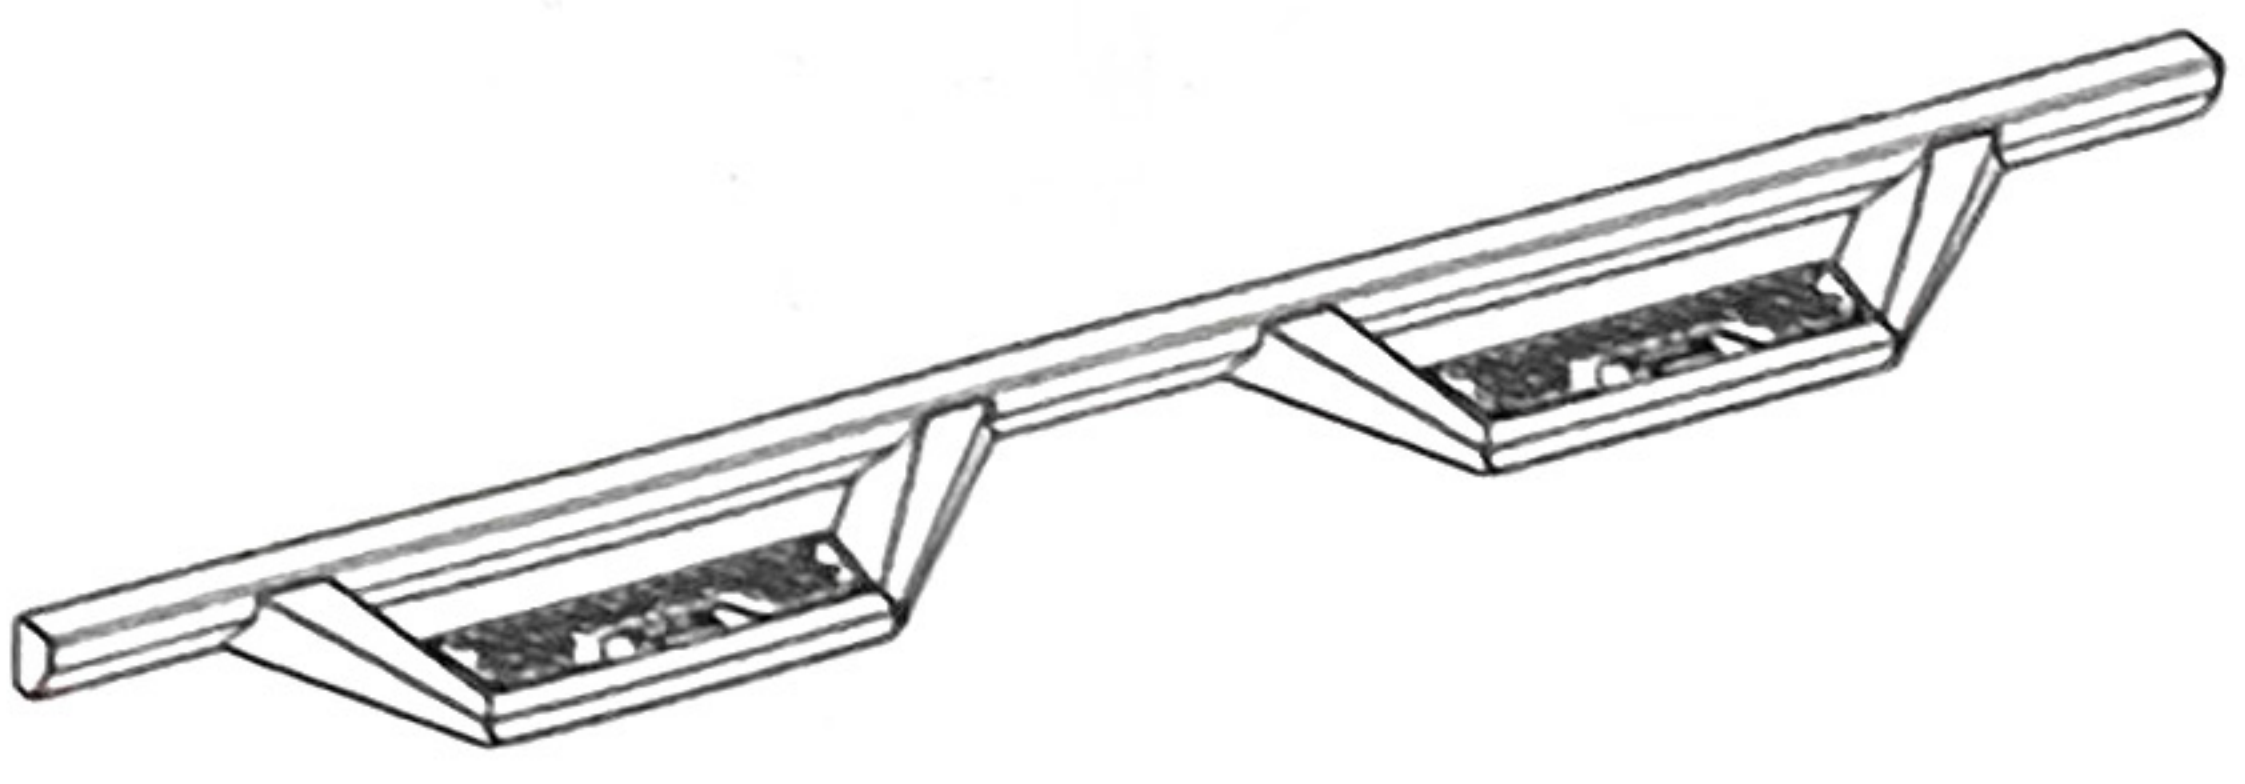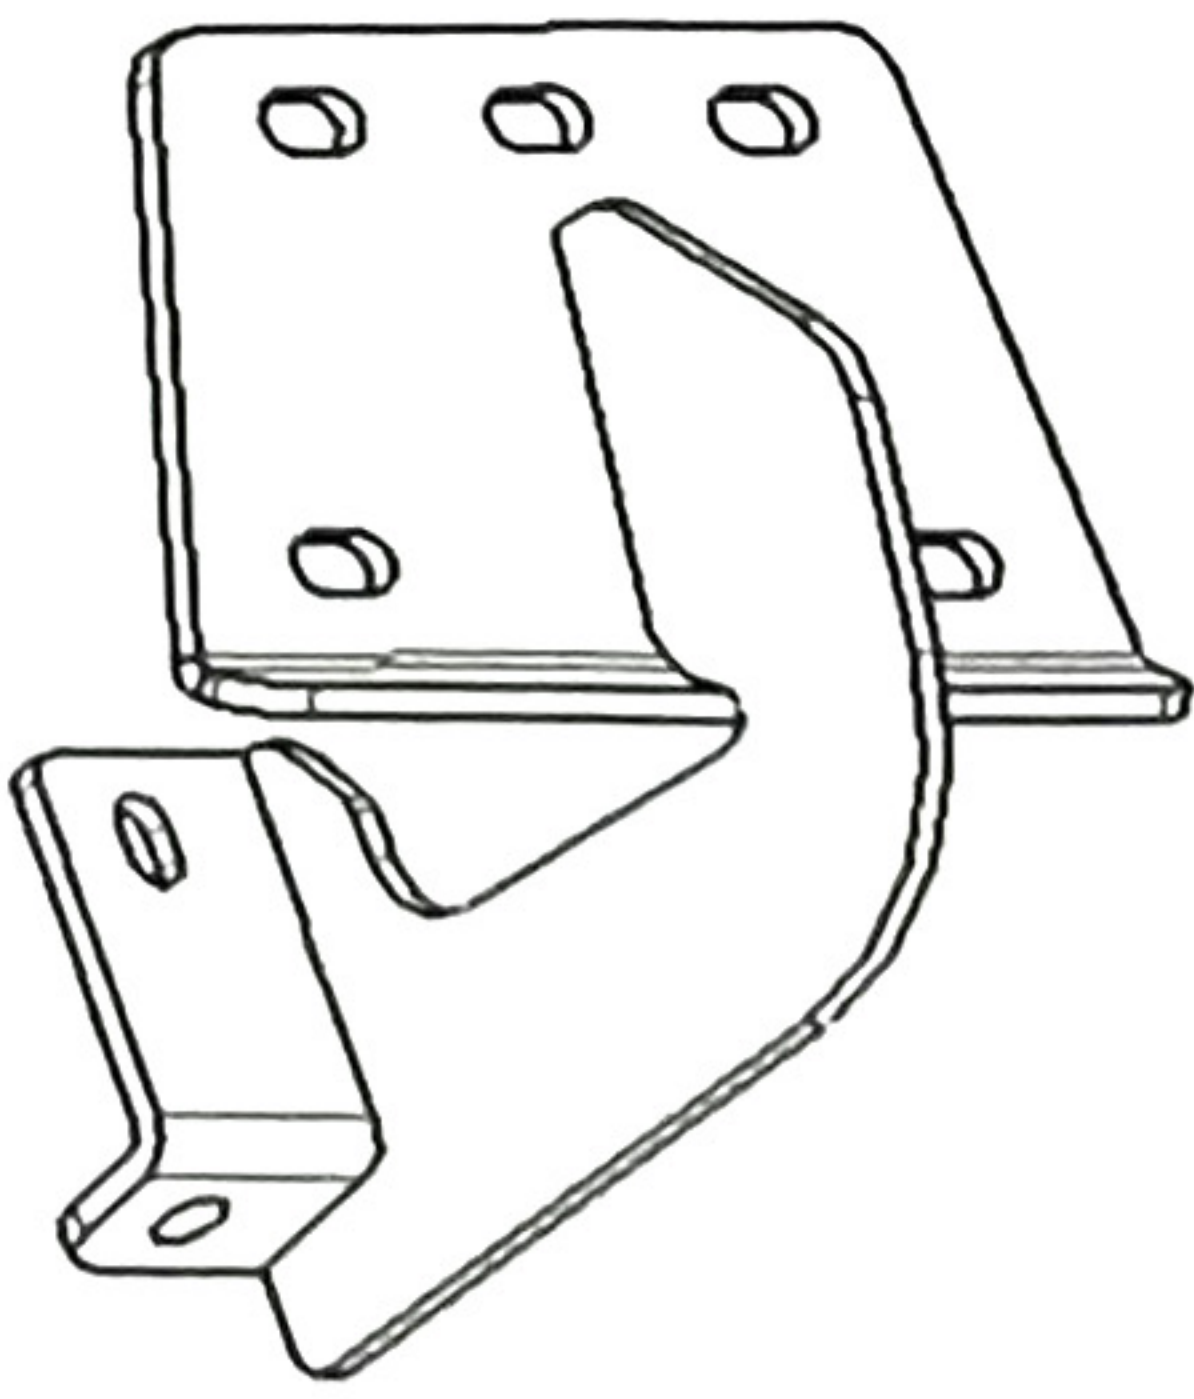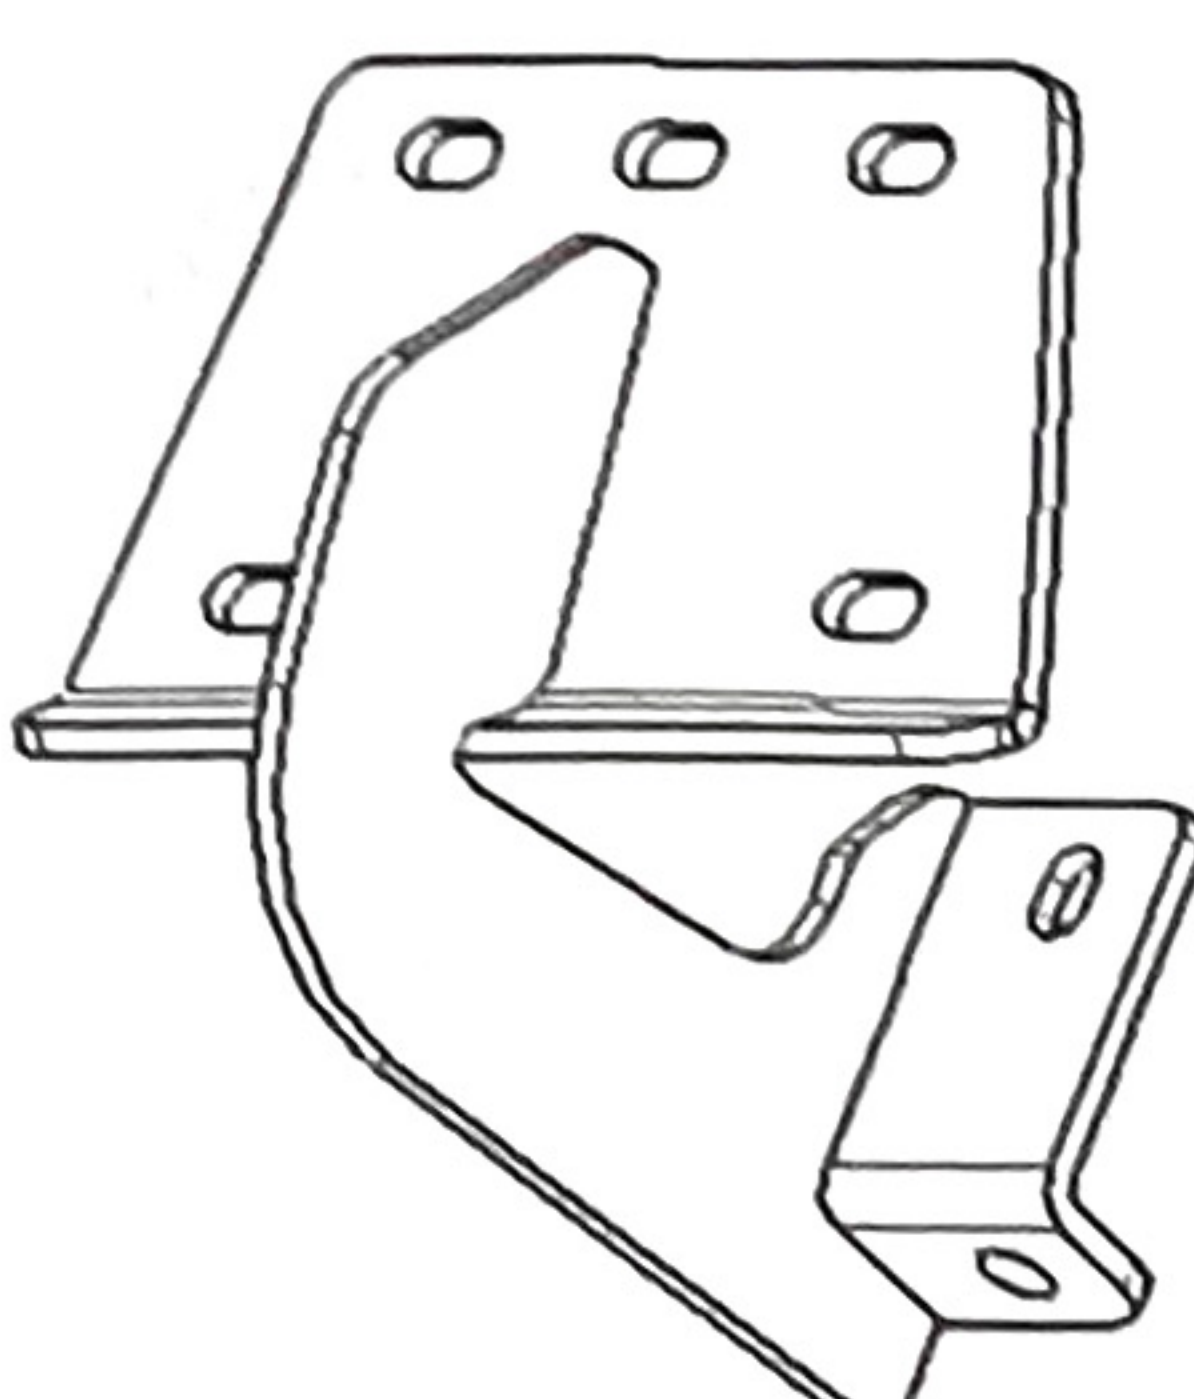
### Parts list

NO.	QTY	PIC	NO.	QTY	PIC
①	1	 Side step (L)	②	1	 Side step (R)
③	3	 Bracket (L)	④	3	 Bracket (R)
⑤	18	 Large washer D8	⑥	18	 Hex nut M8




# INSTALLATION INSTRUCTIONS

Step 1: Verify  
Step 2: Fi  
enr.

⑦


12

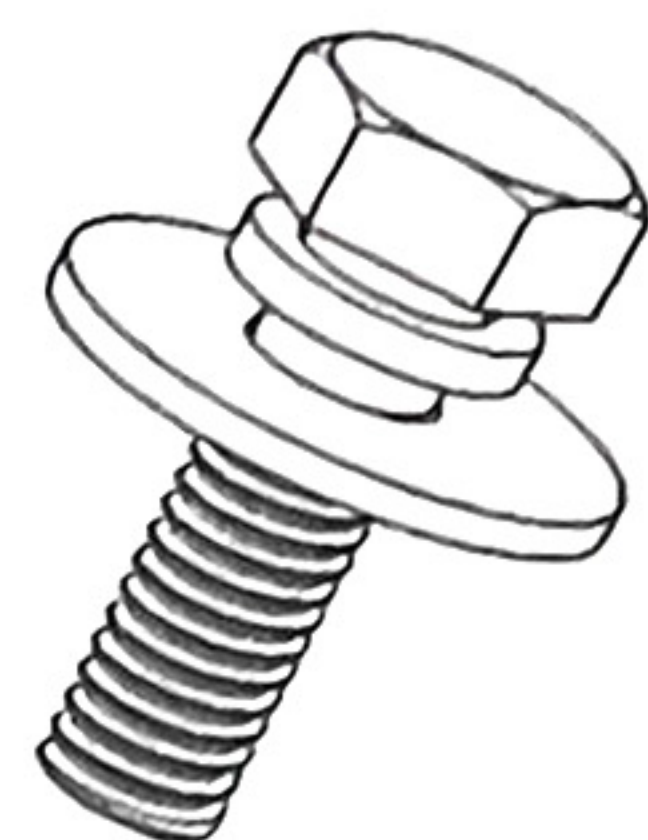

Hex head bolt, spring washer and large washer assembly M8\_25

⑧

## Installation Steps Installing picture

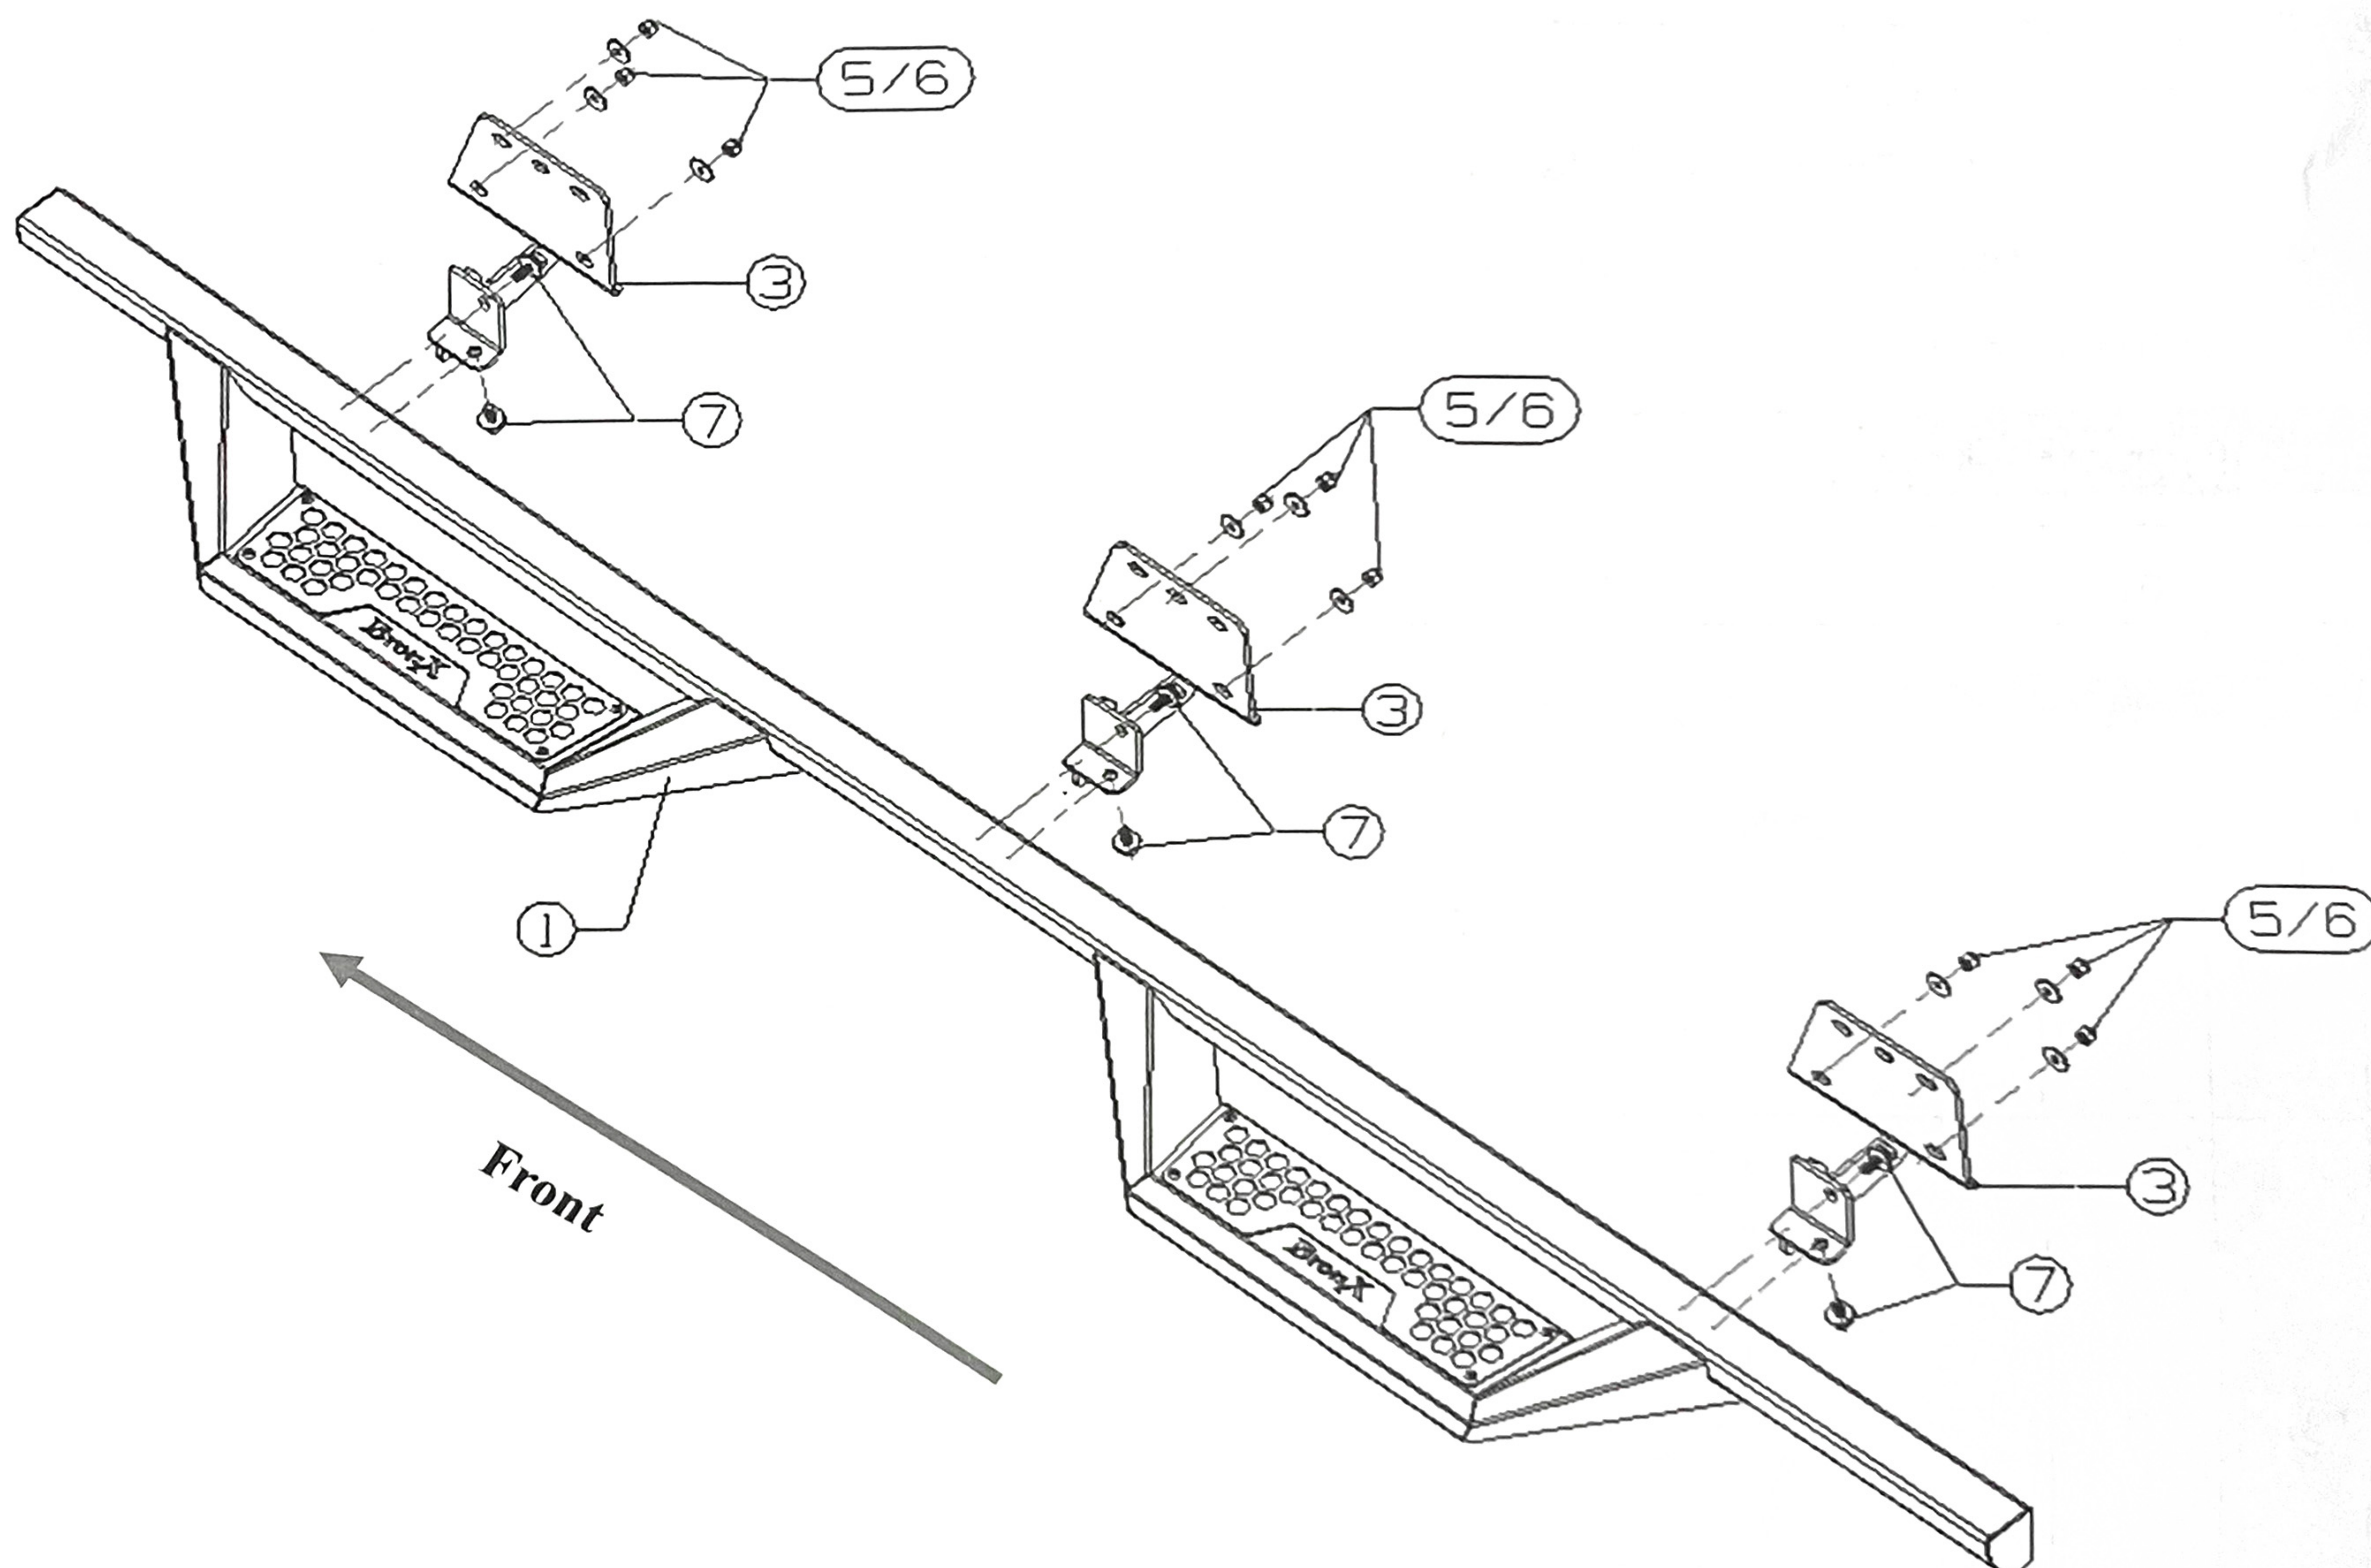




## INSTALLATION INSTRUCTIONS


Step 1: Verify that all parts are present according to the manual.

Step 2: Find the exposed 3 sets of mounting points with screws on the inner side of the original car edge.

Front

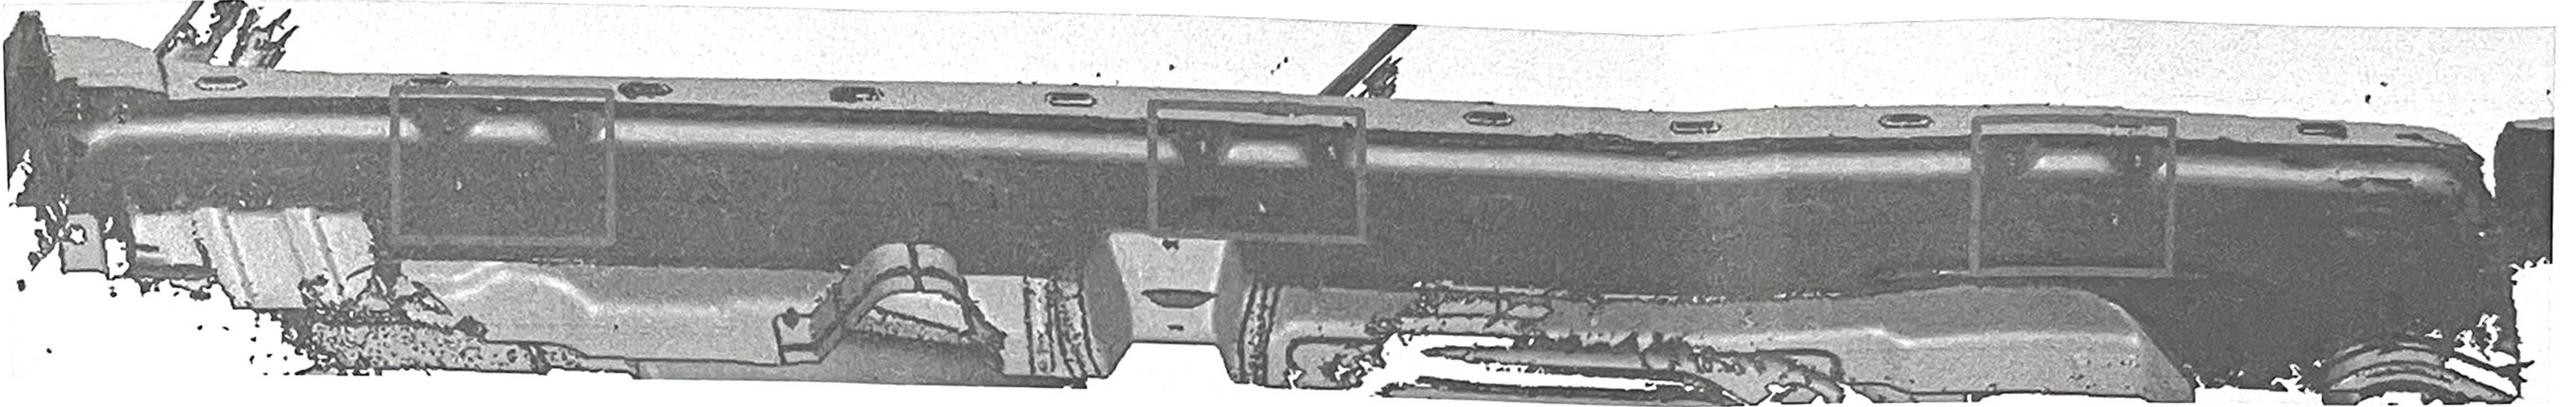

Install the bracket on the original car in turn, and then adjust the side step to a suitable position to install with the bracket, and the left and right are consistent.

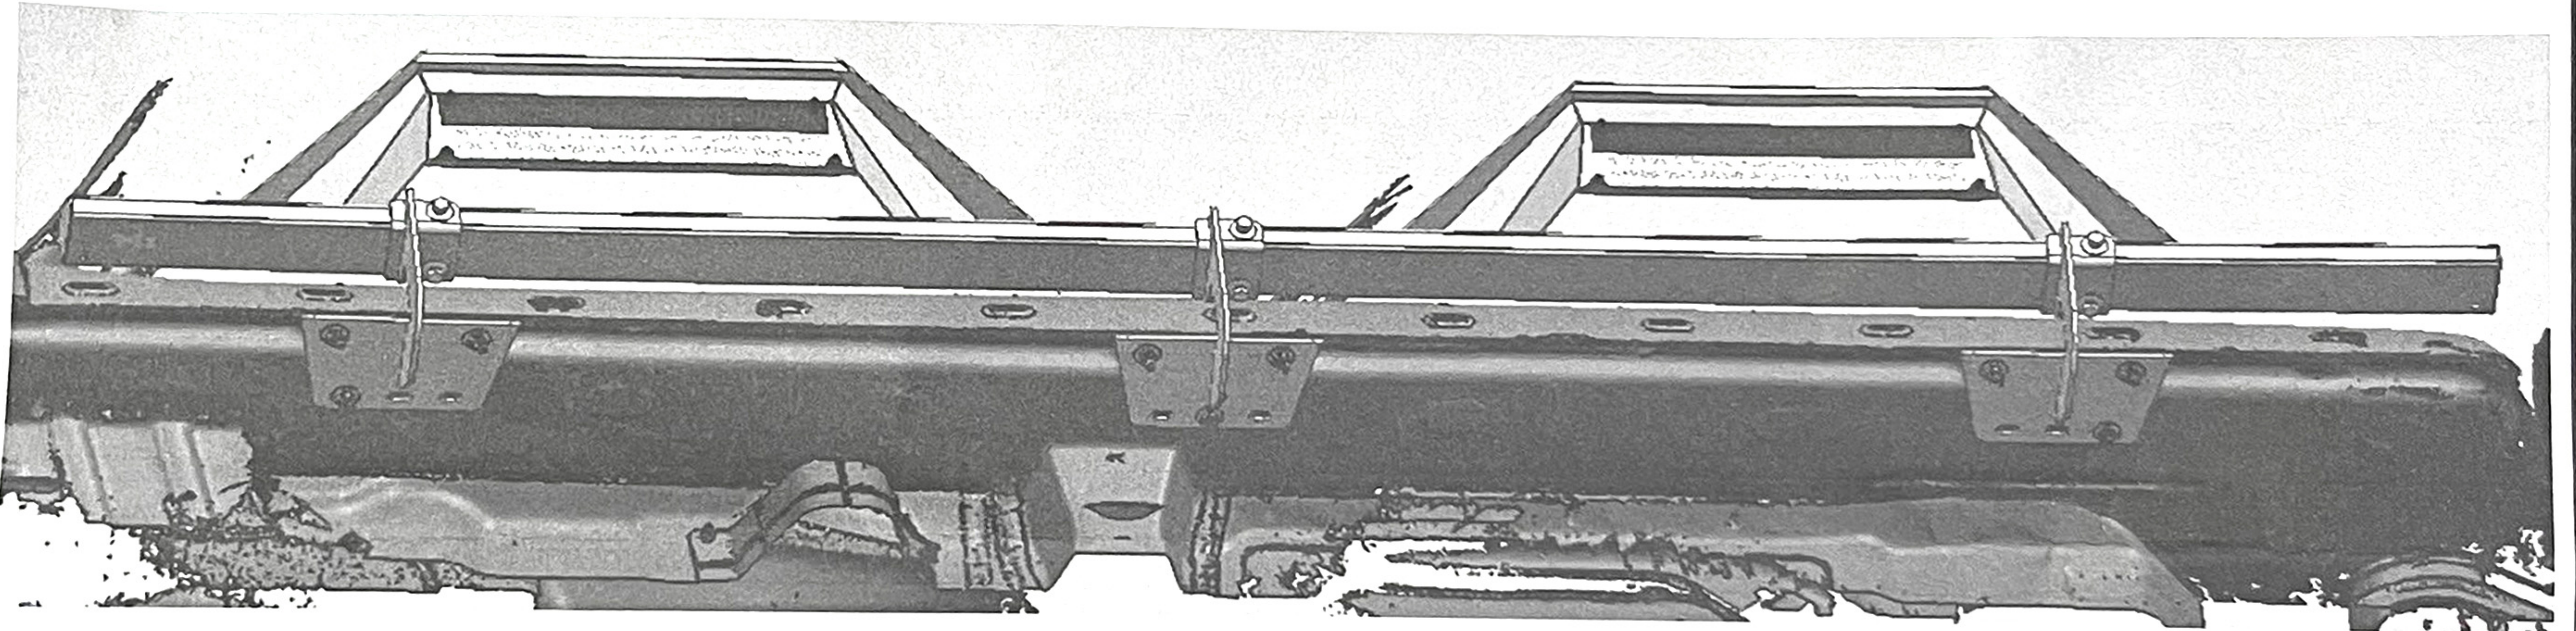

Step 3: Test and make sure that the grille guard is steadily fixed, fully tighten all hardware.

Step 4: Installation is finished, pick up all tools.

### NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.