

INSTALLATION INSTRUCTIONS

PART# EWTPHR16-B

80" AL. S8 SIDE STEP BRACKET FOR TOYOTA HILUX REVO 15-23

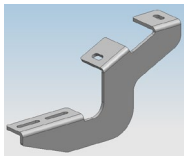
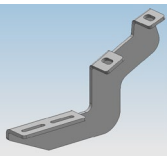
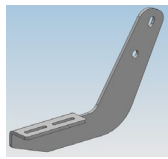
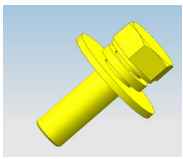
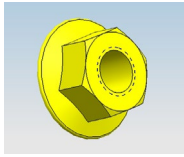
Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

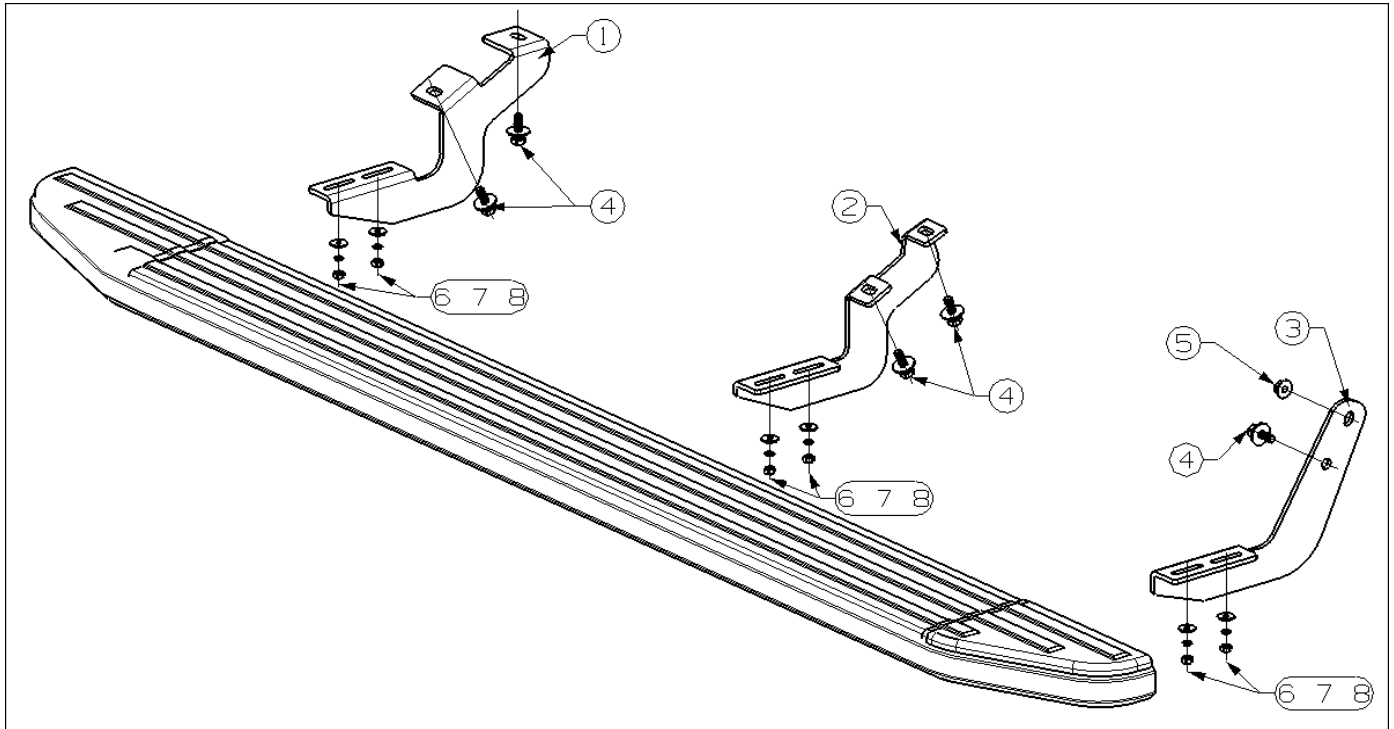
Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	2	 Front Bracket	②	2	 Middle Bracket
③	2	 Rear Bracket	④	10	 Hex Bolt Assembly M8_25
⑤	2	 Hex Nut M8			

INSTALLATION INSTRUCTIONS

Installation Steps

Installation Figure:



Step 1: Verify all parts are present.

Step 2: Install the brackets and running board on the bottom of vehicle as above picture.

Step 3: Check the running board if it install correctly, then tighten all the hardware.

Step 4: Installation finished.

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.