

SANDY BLACK UNIVERSAL TRUCK BED RACK FOR 15-22 CHEVY COLORADO/05-22 TOYOTA TACOMA  
(INSTALL INTO UTILITY TRACK)/19-22 FORD RANGER /05-22NISSAN FRONTIER

# **INSTALLATION INSTRUCTIONS**

**SANDY BLACK UNIVERSAL TRUCK BED RACK FOR 15-22 CHEVY  
COLORADO/05-22 TOYOTA TACOMA (INSTALL INTO UTILITY  
TRACK)/19-22 FORD RANGER /05-22NISSAN FRONTIER  
PART # RWVPCCTT**

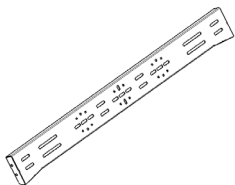
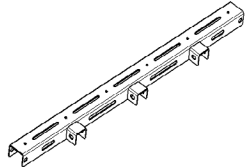

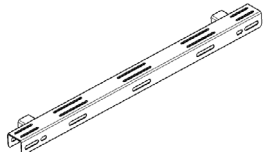


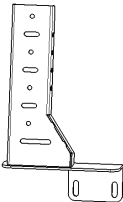
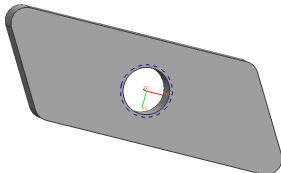
## Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.










## Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

## Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	2	 Side beam	②	2	 Longitudinal beam
③	3	 Intermediate beam	④	2	 Cross beam
⑤	4	 Support base 1	⑥	2	 Support base 2 (R)
⑦	2	 Support base 2 (L)	⑧	8	 Nut plate 2 (FRONTIER)


**SANDY BLACK UNIVERSAL TRUCK BED RACK FOR 15-22 CHEVY COLORADO/05-22 TOYOTA TACOMA  
(INSTALL INTO UTILITY TRACK)/19-22 FORD RANGER /05-22NISSAN FRONTIER**

<b>⑨</b>	4	 Auxiliary bracket tape (FRONTIER)	<b>⑩</b>	2	 Single-sided adhesive tape 3 (L)
<b>⑪</b>	2	 Single-sided adhesive tape 3 (R)	<b>⑫</b>	4	 Single-sided adhesive tape 4
<b>⑬</b>	4	 Single-sided adhesive tape 5 (RANGER)	<b>⑭</b>	4	 Reinforcing plate (RANGER)
<b>⑮</b>	4	 Single-sided adhesive tape 5 (COLORADO)	<b>⑯</b>	4	 Single-sided adhesive tape 5 (TACOMA)
<b>⑰</b>	8	 T Bolt M8x25 (TACOMA)			

**Standard parts:**

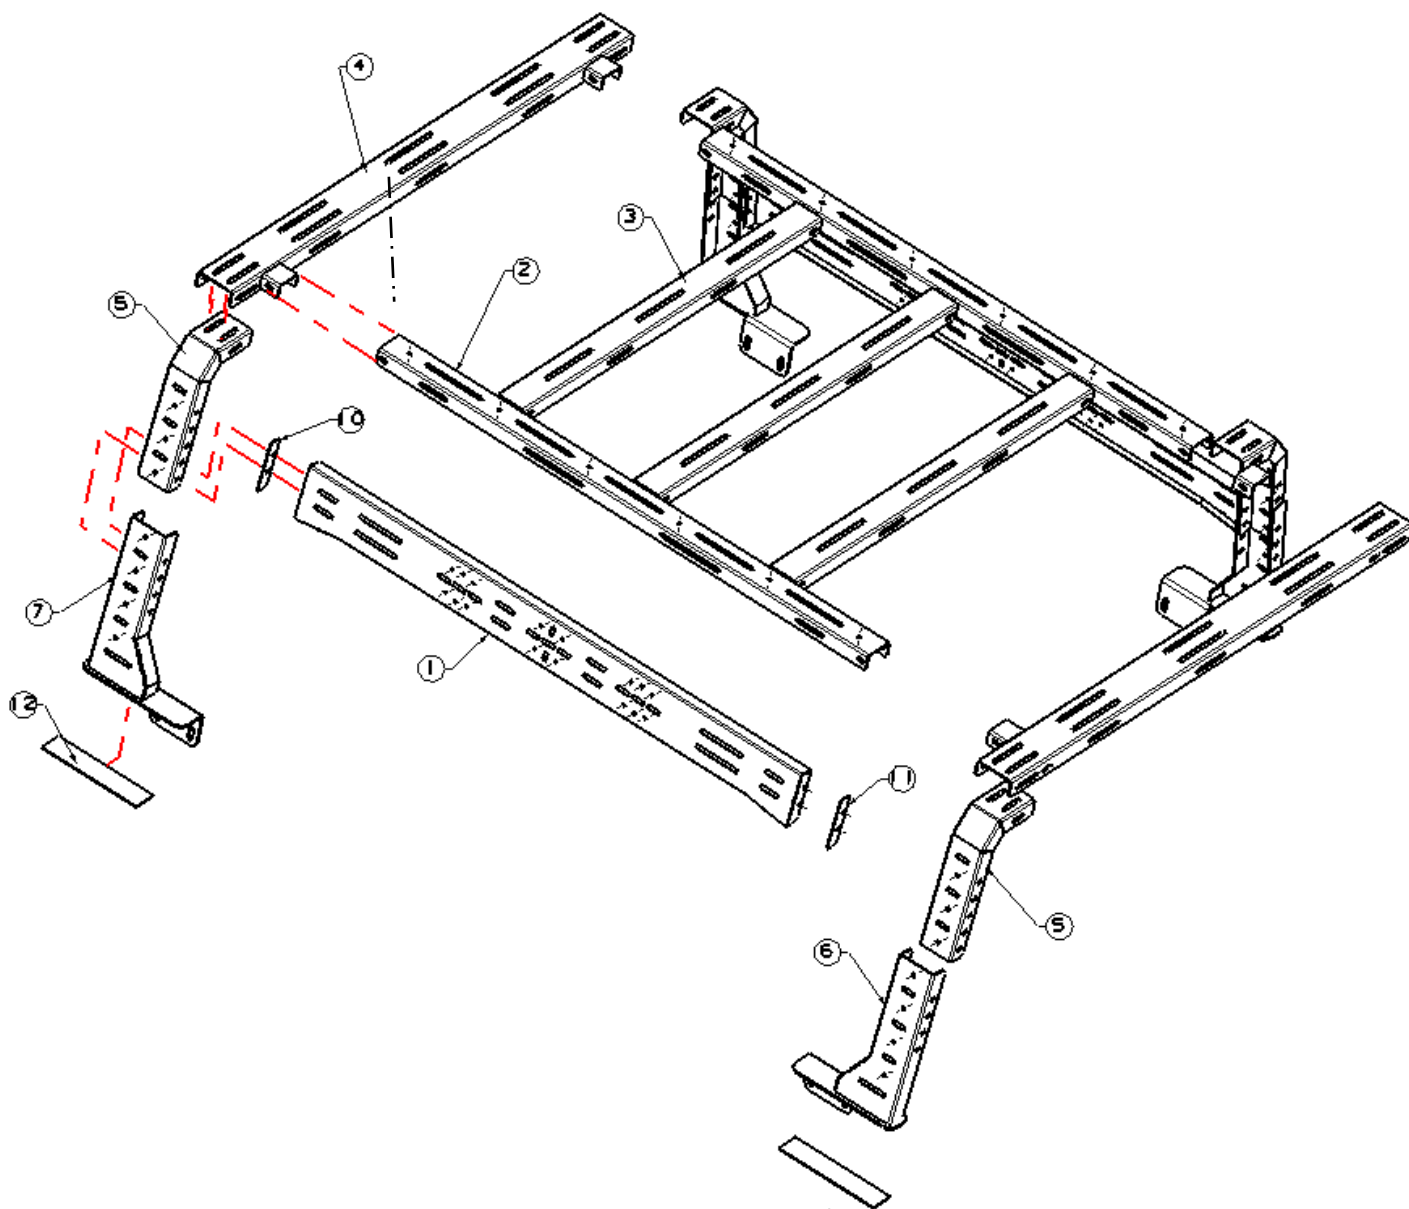NO.	NAME	QTY	NOTE
18	Allen wrench S=5	1	MAIN PART
19	Lock washer D8	60	
20	Flat washer D8 (8x24x2mm)	60	
21	Hex flange nut M8	60	
22	Hex flat round head bolt M8_25	60	
23	Lock washer D10	16	FRONTIER
24	Flat washer D10 (10x30x2.5mm)	16	
25	Hex bolt M10_20	8	
26	Hex bolt M10_25	8	
27	Lock washer D10	8	RANGER
28	Flat washer D10 (10x30x2.5mm)	8	
29	Hex bolt M10_35	8	
30	Lock washer D10	8	COLORADO
31	Flat washer D10 (10x30x2.5mm)	16	
32	Hex nut M10	8	
33	Hex bolt M10_35	8	
34	Flat washer D8 (8x28x3mm)	8	TACOMA
35	Hex lock nut M8	8	


## Installation Figure




Step 1: Verify that all parts are present according to the manual.

Step 2: Using hardware (19) (20) (21) (22) to connect Intermediate beam (3) and Longitudinal beam (2).

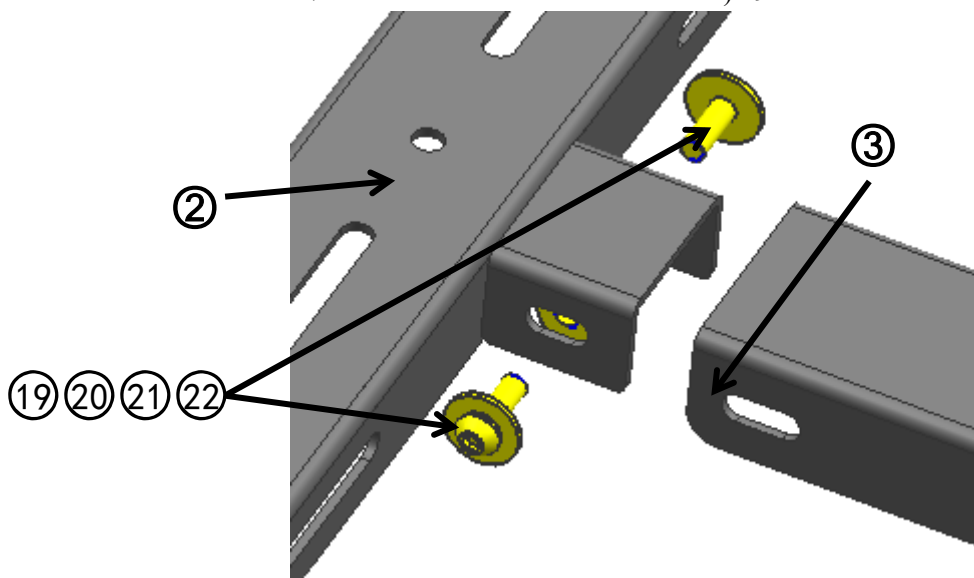SANDY BLACK UNIVERSAL TRUCK BED RACK FOR 15-22 CHEVY COLORADO/05-22 TOYOTA TACOMA  
(INSTALL INTO UTILITY TRACK)/19-22 FORD RANGER /05-22NISSAN FRONTIER




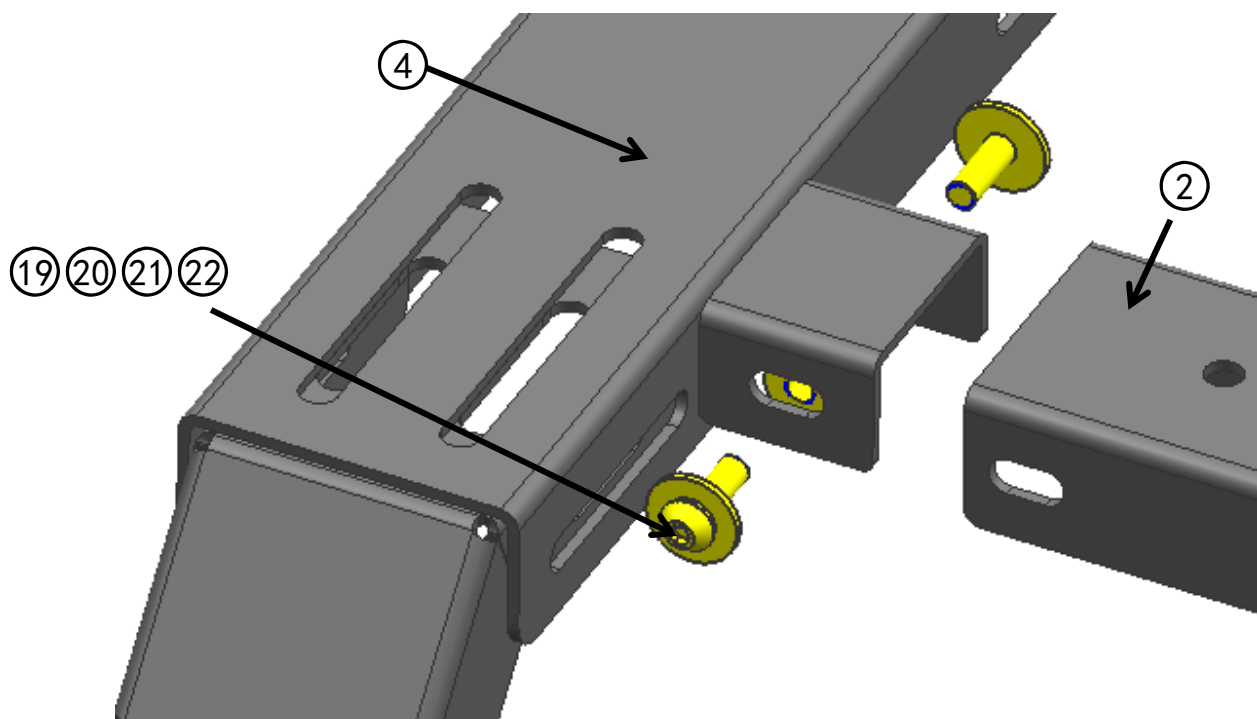Step 3: Using hardware (19) (20) (21) (22) to connect Cross beam (4) and Longitudinal beam (2).




Step4: Using hardware (19) (20) (21) (22) to install Side beam (1), Longitudinal beam (5) and Support base (6) (7), do not tighten all the hardware.

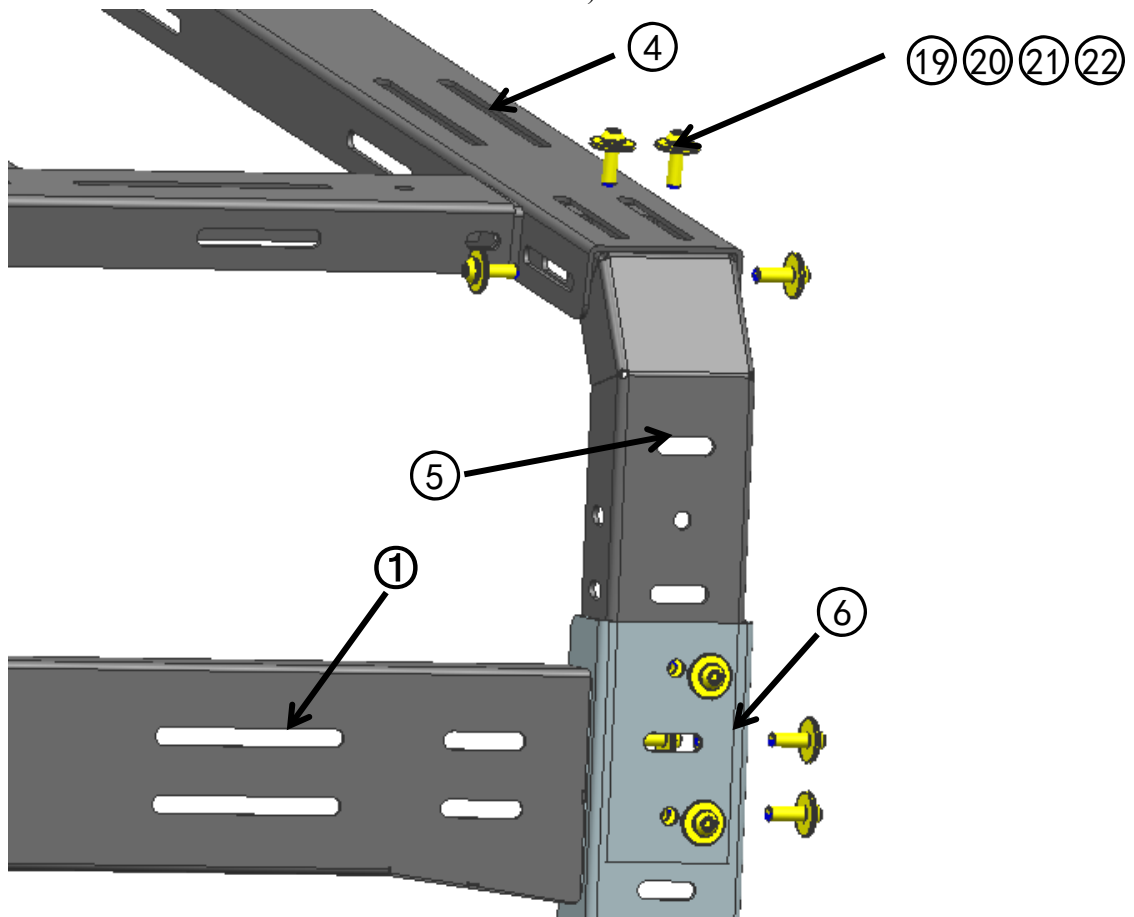SANDY BLACK UNIVERSAL TRUCK BED RACK FOR 15-22 CHEVY COLORADO/05-22 TOYOTA TACOMA  
(INSTALL INTO UTILITY TRACK)/19-22 FORD RANGER /05-22NISSAN FRONTIER




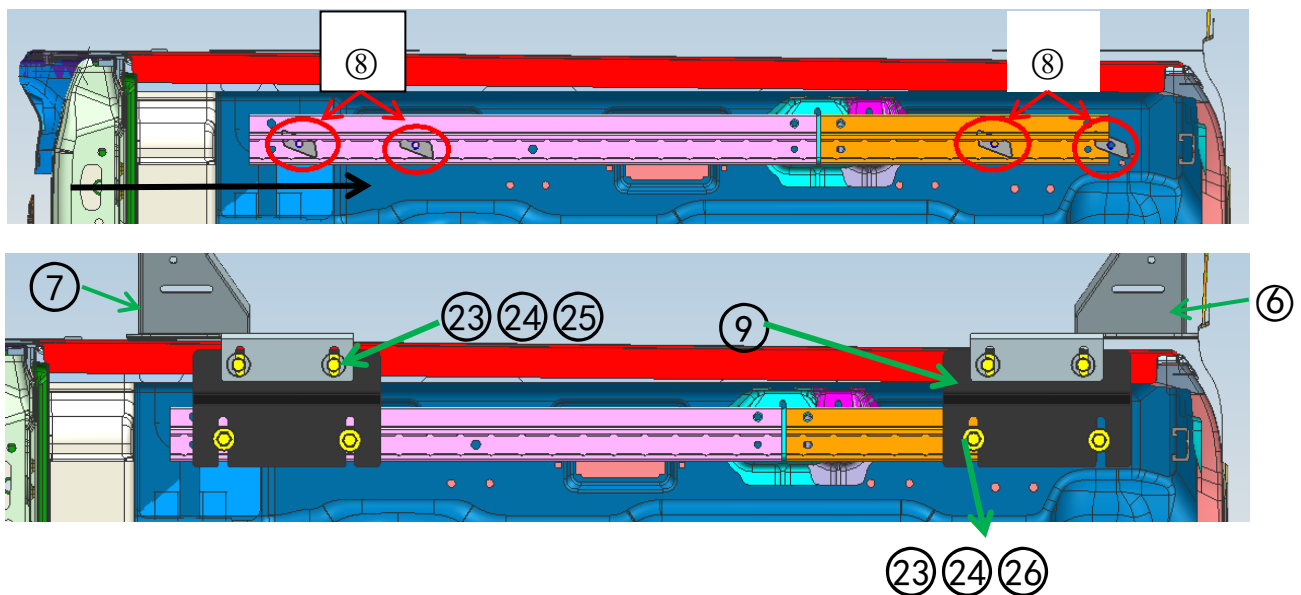Step 5.1 (FRONTIER): Slide Nut plates (8) in the truck, and then use hardware (23) (24) (26) to connect (9) with (8). Use hardware (23) (24) (25) to install (9) with (6) / (7), do not tighten all the hardware.




Step 5.2 (RANGER): Use hardware (14) (27) (28) (29) to install TRUCK BED RACK on the truck, do not tighten all the hardware.

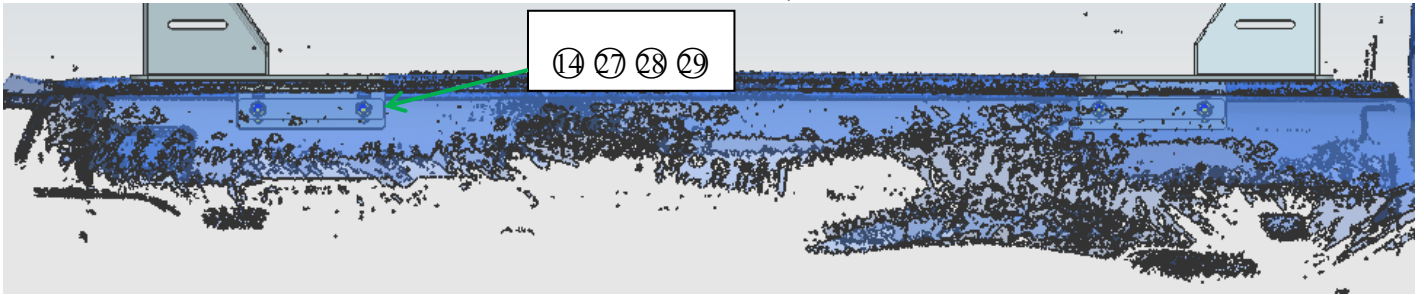
SANDY BLACK UNIVERSAL TRUCK BED RACK FOR 15-22 CHEVY COLORADO/05-22 TOYOTA TACOMA  
(INSTALL INTO UTILITY TRACK)/19-22 FORD RANGER /05-22NISSAN FRONTIER



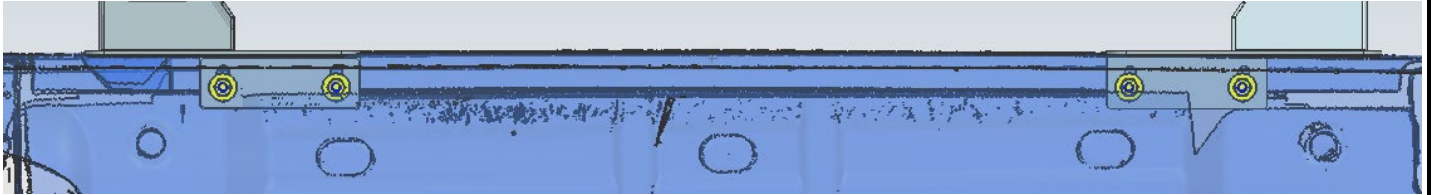
Step 5.3 (COLORADO): Use hardware ③① ③② ③③ to install TRUCK BED RACK on the truck, do not tighten all the hardware.



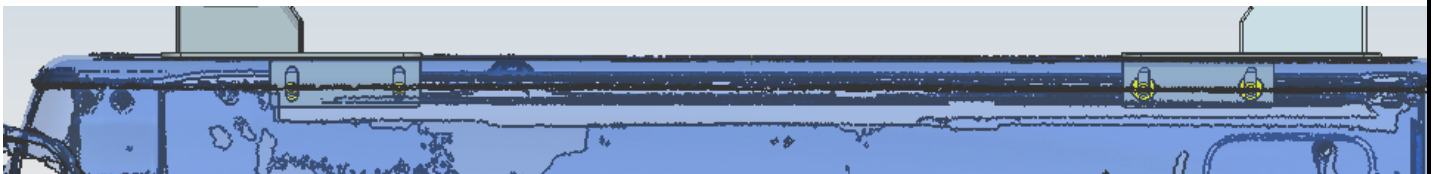Step 5.4 (TACOMA): Use hardware ①⑦ ③④ ③⑤ to install TRUCK BED RACK on the truck, do not tighten all the hardware.



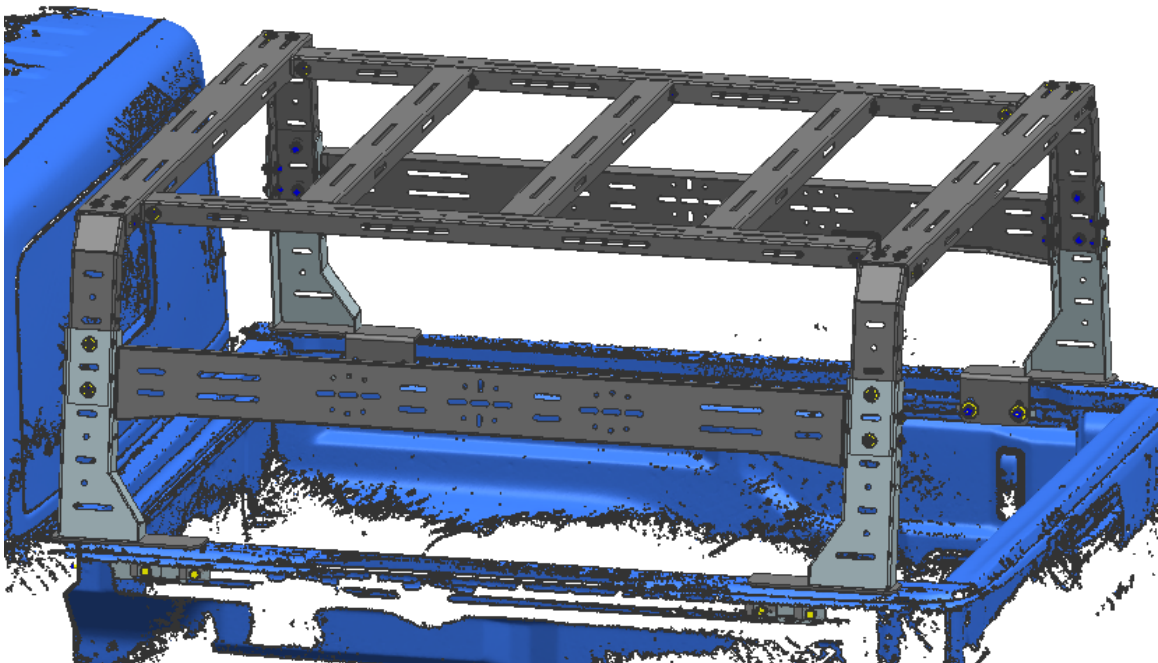Step 6: Complete installation, pick up all tools.



## NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.