

INSTALLATION INSTRUCTIONS

PART# RWVPTFNM

LADDER RACK - FB ROLL BAR WITH CARGO RACK&W/O LED LIGHT FOR TOYOTA HILUX 15+/NISSAN FRONTIER 2014+/ISUZU D-MAX 2012+ /FORD RANGER 12+

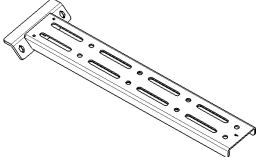
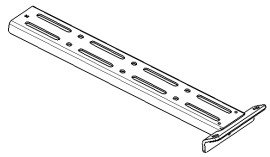
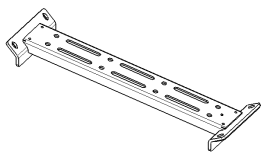
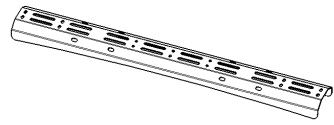
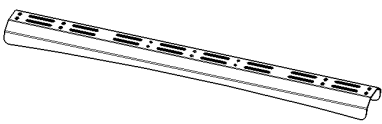
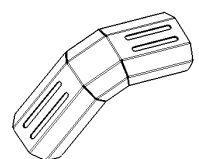
Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.








Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

| NO. | QTY | NAME | NO. | QTY | NAME |
|--------------------|-----|--|-----|-----|---|
| MR2 ROOF RACK LIST | | | | | |
| ① | 2 |  Front longitudinal beam | ② | 2 |  Rear longitudinal beam |
| ③ | 2 |  Load beam | ④ | 1 |  Front cross beam |
| ⑤ | 1 |  Rear cross beam | ⑥ | 2 |  Support bracket (L) |

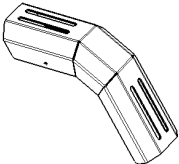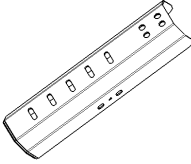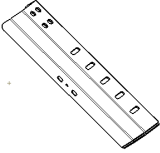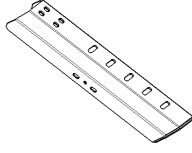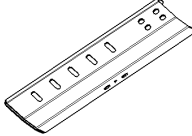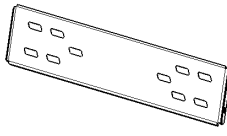INSTALLATION INSTRUCTIONS

| | | | | | |
|---------------------|----|--|---|----|---|
| ⑦ | 2 |  | ⑧ | 2 |  |
| | | Support bracket (R) | | | Front support bracket base 2 (L) |
| ⑨ | 1 |  | ⑩ | 1 |  |
| | | Front support bracket base 2 (R) | | | Rear support bracket base 2 (L) |
| ⑪ | 1 |  | ⑫ | 1 |  |
| | | Rear support bracket base 2 (R) | | | Decorating plate (L) |
| ⑬ | |  | | | |
| | | Decorating plate (R) | | | |
| STANDARD PARTS LIST | | | | | |
| ⑭ | 8 | Hex nuts M6 | ⑮ | 8 | Hexagon socket button head screws assembly M6_20 |
| ⑯ | 64 | Flat washer D8 | ⑰ | 64 | Hexagon socket button head screws M8_30 |
| ⑱ | 64 | Hex nuts M8 | | | |

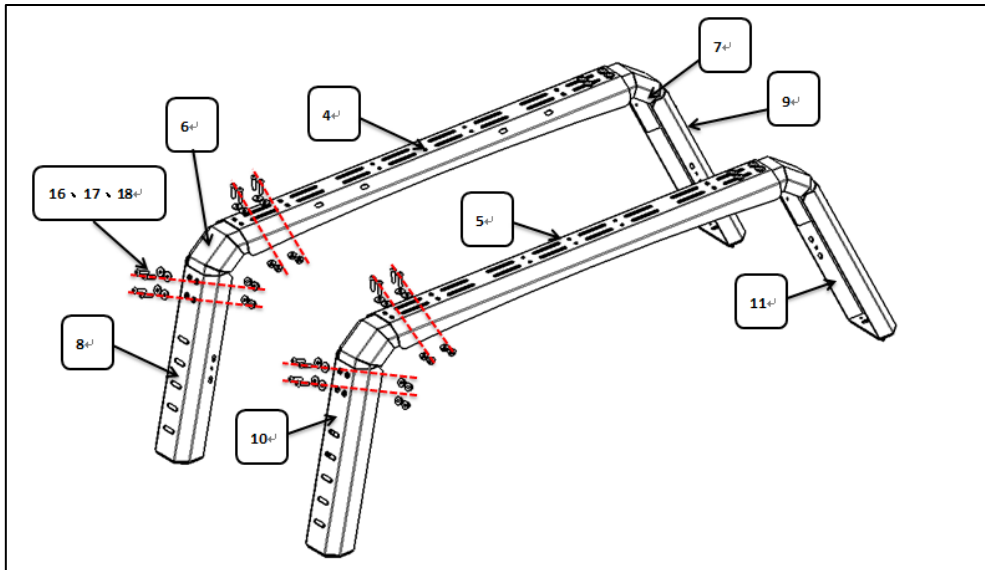
STEP 1:

Verify that all parts are present according to the manual.


STEP 2:

Connect the support brackets ⑥⑦ with each support bracket base ⑧⑨⑩⑪ and Front & Rear cross beam ④⑤. Do not tighten the standard parts.

INSTALLATION INSTRUCTIONS




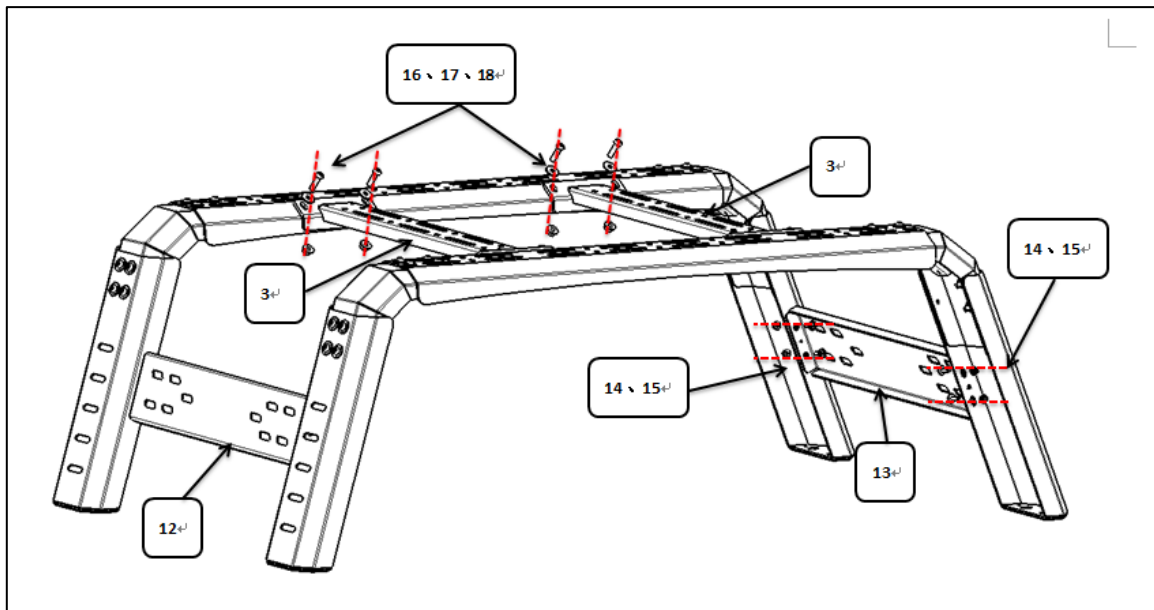STEP 3: Connect the load beams (3) and Decorating plate (12) (13) with Step 2 installed front and rear beam assembly by standard parts (14) (15) (16) (17) (18), do not tighten hardware.




STEP 4: Connect cargo rack and FB roll bar with Front & Rear longitudinal beam (1) (2) by using (16) (17) (18), adjust to the appropriate position and tighten all standard parts.

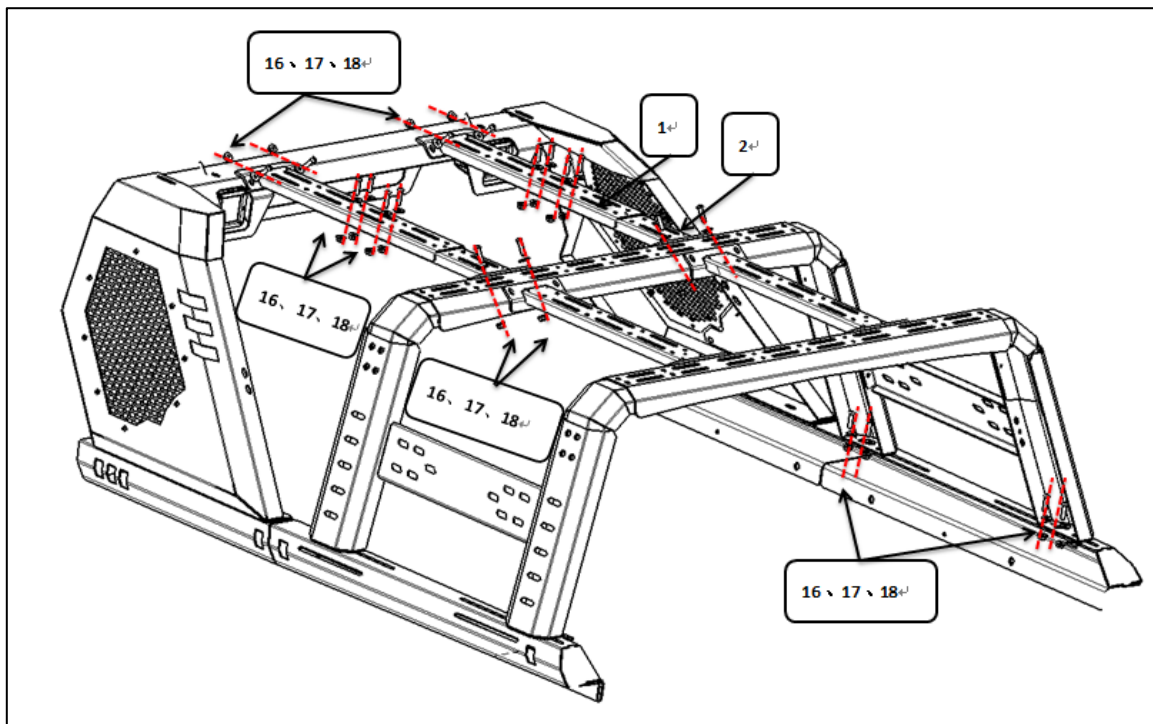INSTALLATION INSTRUCTIONS



STEP 5:

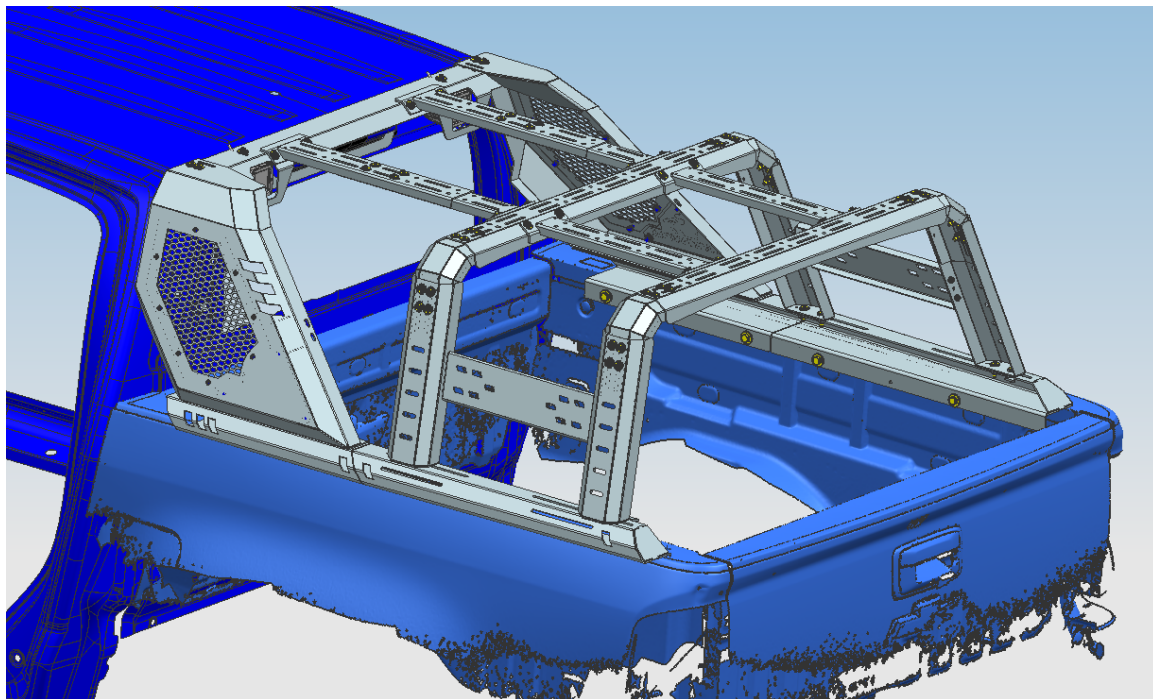Installation is finished, pick up all tools.



NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.