

**BRACKET FOR MR ROLL BAR FOR TOYOTA NISSAN FRONTINER
2014+ (WITH TONNEAU COVER BASE)**

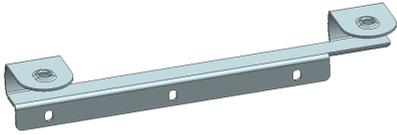
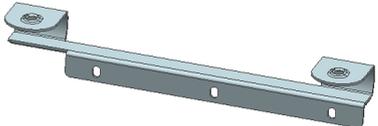

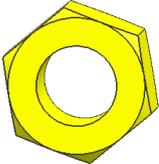
Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.



Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list


NO.	QTY	NAME	NO.	QTY	NAME
①	1	 Bracket (L)	②	1	 Bracket (R)
③	4	 Rubber Cover	④	6	 Hex Bolts M12_40
⑤	6	 Hex Nuts M12	⑥	4	 Countersunk Button Head Screw M12_40

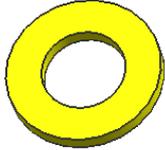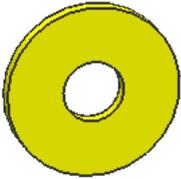INSTALLATION INSTRUCTIONS

⑦	6	 Flat Washer D12(12x24x2.5mm)	⑧	6	 Large Washer D12(12x37x3mm)
⑨	6	 Spring Washer D12	⑩	1	 Allen Wrench S=8

Installation Steps

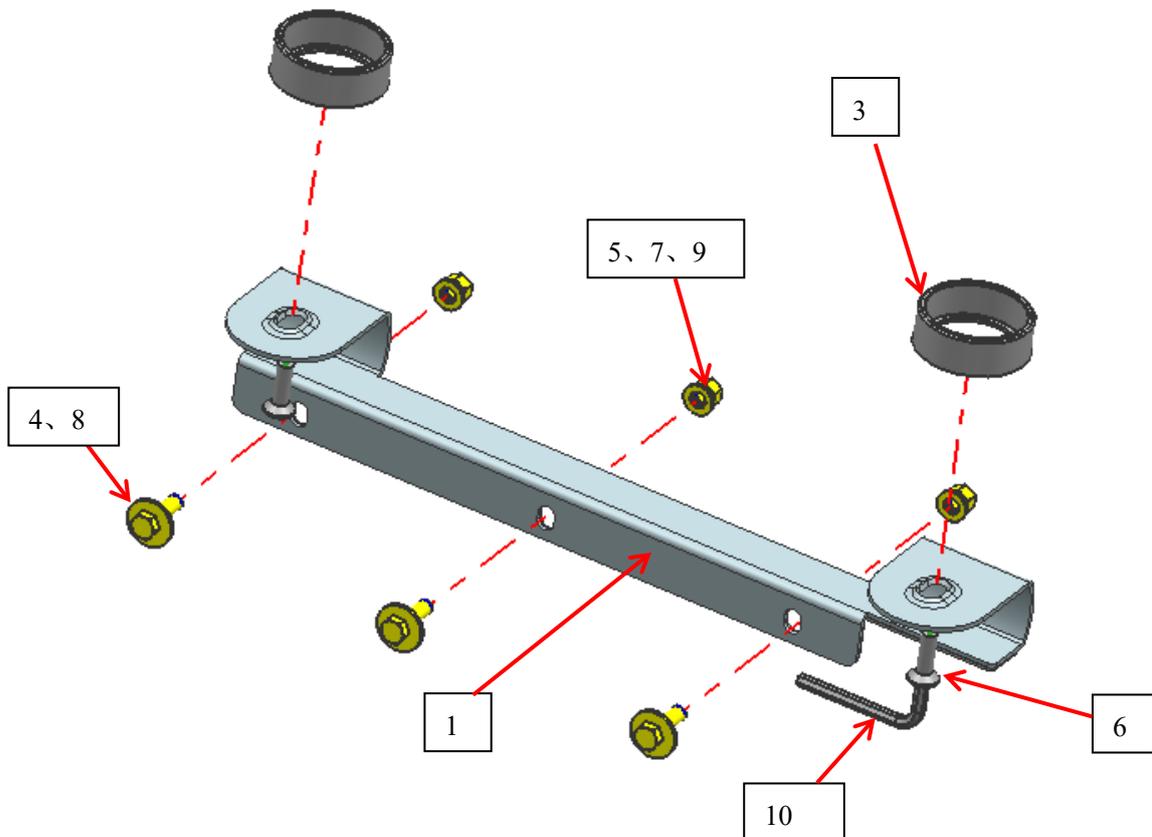
Installation Fig.




INSTALLATION INSTRUCTIONS

Step 1: Verify that all parts are present according to the manual.

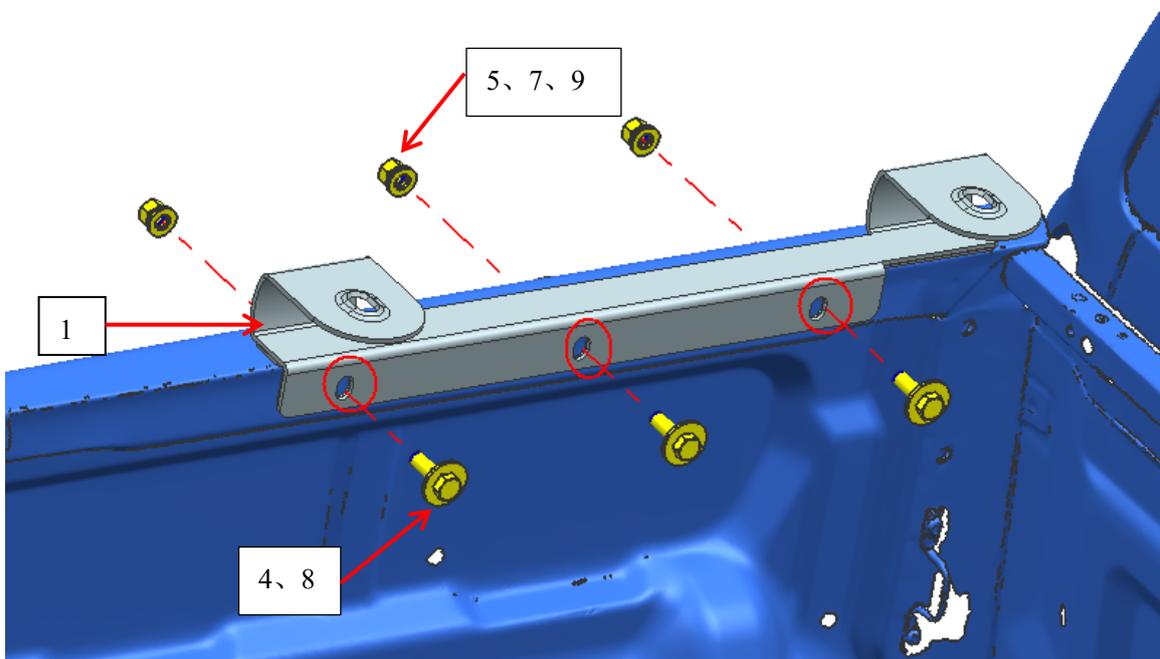Step 2: Put the bracket on the truck, mark the holes as below picture shows on each side. Then remove the bracket, drill holes ($\varnothing 12$). Install the brackets on the truck with hardware 4/5/7/8/9.



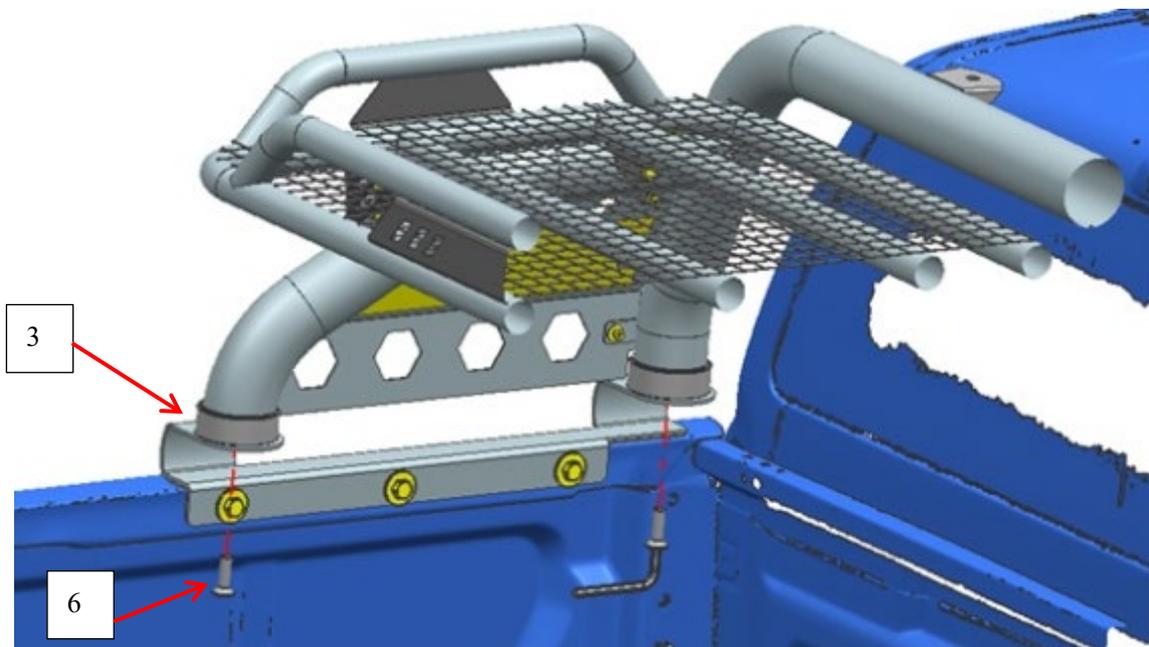
Step 3: Install MR Roll Bar on the brackets.




Step4: Installation completed.

INSTALLATION INSTRUCTIONS

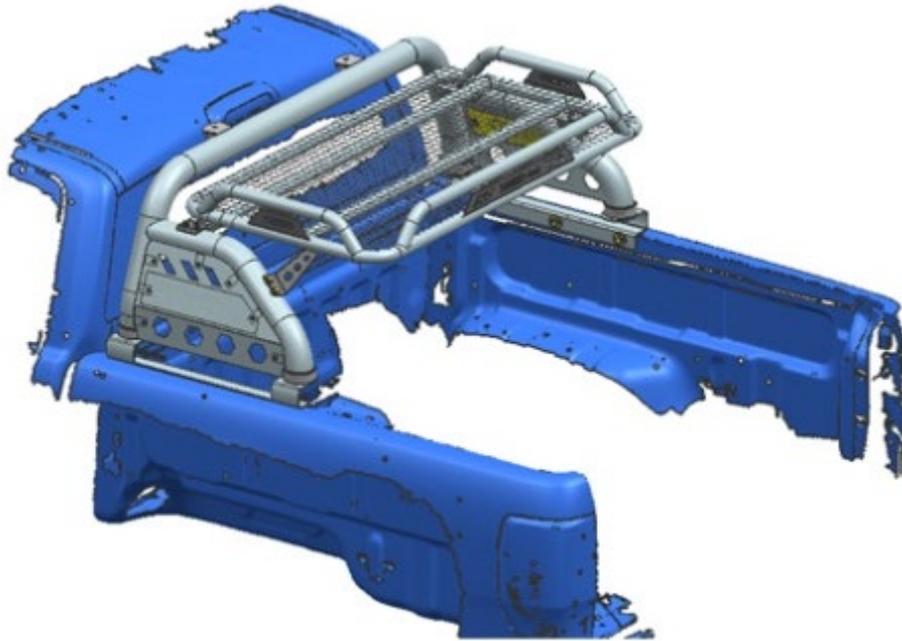Picture for MR Roll Bar.



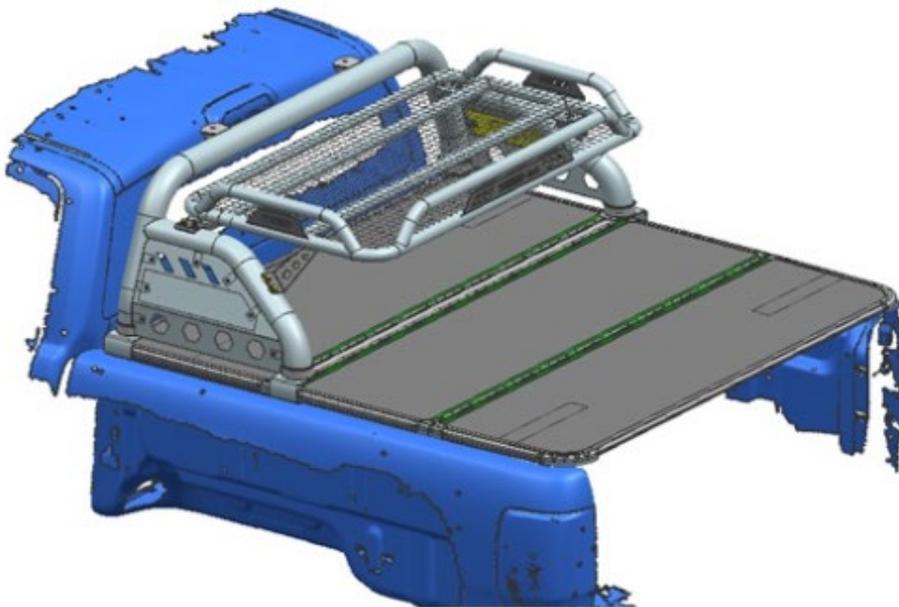Picture for MR Roll Bar with Tri-fold Cover



NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.