PART# RWVPSV16; RWVXVA12	2
INSTALLATION INSTRUCTIONS	
SANDY BLACK MV ROLL BAR FOR MITSUBISHI TRTION 15+	
RWVPSV16; RWVXVA12	
Page 1 of 5	

Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you
 receive, however the goods are fitted in the same way.


Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list


NO.	QTY	PICTURE	NO.	QTY	PICTURE
1	1	Main body(L)	2	1	Main body(R)
3	1	Front tube	4	1	Support plate(R)
5	1	Support plate(L)	6	2	M2 MUSSO LOGO
7	2	Front rubber footing	8	6	Large washer D12

	1				
9	2	Hex Nut M12	10	4	Spring washer D12
11)	2	Hexagon socket head screws M12_35	12	2	Hexagon socket head screws M12_45
13	4	Hexagon socket head screws M6_20	14)	4	Large washer D6
15	4	Hex Flange Nuts M6	16	4	Spring washer D10
17	8	Large washer D10	18	4	Hex Nut M10
19	4	Hexagon head bolts (full thread)M10_35	20	1	ALLEN WERNCH S=4
(2)	1	ALLEN WERNCH S=8			

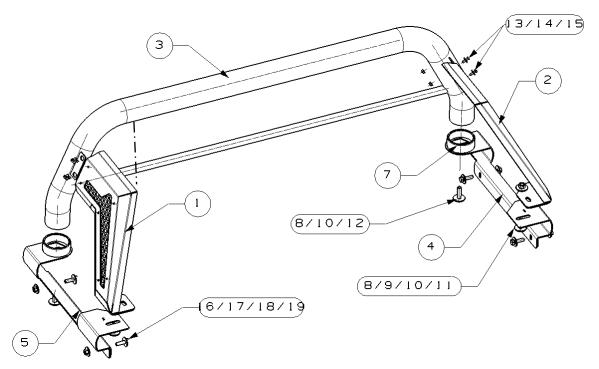


Step 1: Verify that all parts are present according to the manual.

Step 2: Install (1) 2 on (3) by (3) (4) (5) as below show:

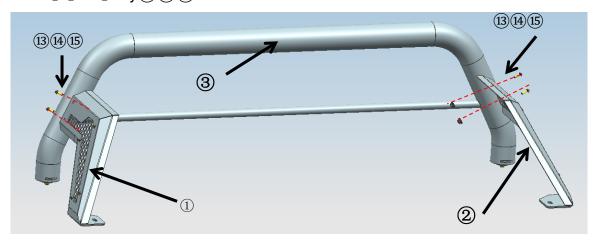


Step 3: Install 5 7 on 1 3 by 8 9 10 11 12 as below show:

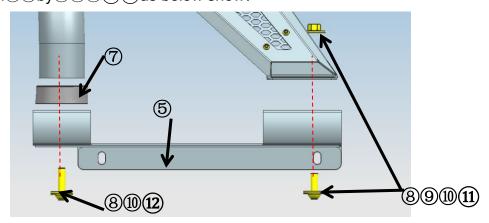


Step4: Place the installed roll bar on the trunk of the truck and adjust it to a suitable position, then Page 4 of 5

use 16 17 18 19 to fix 5 on the bodywork, and fix and lock the roll bar.

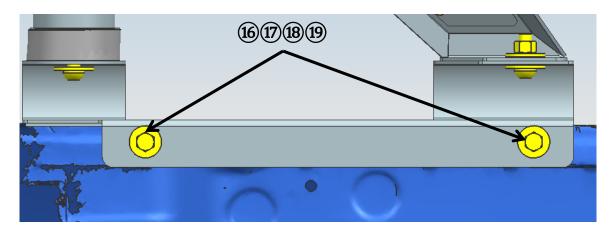

Step 5: Complete installation, pick up all tools.

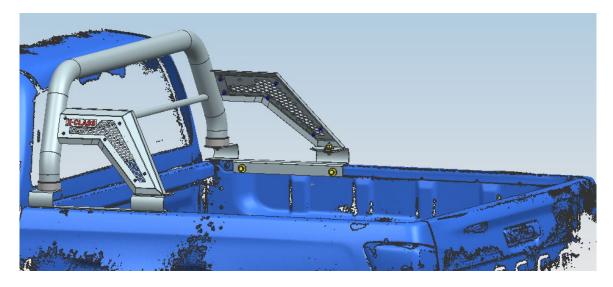

NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.