

INSTALLATION INSTRUCTIONS

MT ROLL BAR FOR F150 15-22/RAM 19-22 /SILVERADO 14+

RWVPRCS

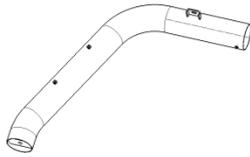

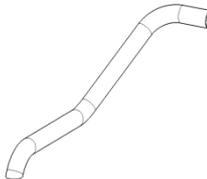
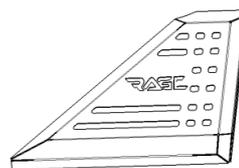
Before Installation











- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.


Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list


NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Front Rack (Mid)	②	1	 Front Rack (L)
③	1	 Front Rack (R)	④	1	 Rear Rack (Mid)
⑤	1	 Rear Rack (R)	⑥	1	 Rear Rack (L)
⑦	1	 Decoration Plate(L)	⑧	1	 Decoration Plate(R)
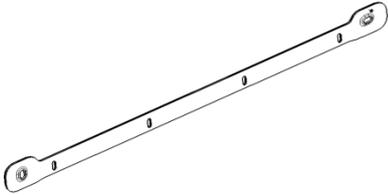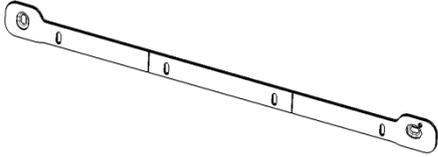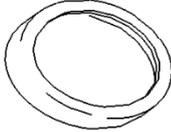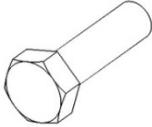
<p>⑨</p> <p>1</p>	 <p>Support Plate(L)</p>	<p>⑩</p> <p>1</p>	 <p>Support Plate(R)</p>
<p>⑪</p> <p>2</p>	 <p>Front Rubber Footing</p>	<p>⑫</p> <p>2</p>	 <p>Rear Rubber Footing</p>
<p>⑬</p> <p>4</p>	 <p>Hexagon Countersunk Head Screws M10_40</p>	<p>⑭</p> <p>10</p>	 <p>Hexagon head bolts (full thread)M10_35</p>
<p>⑮</p> <p>10</p>	 <p>Hex Nut M10</p>	<p>⑯</p> <p>20</p>	 <p>Flat washer D10_24_2.2</p>
<p>⑰</p> <p>10</p>	 <p>Spring washer D10</p>	<p>⑱</p> <p>4</p>	 <p>Flat riveted nut M10_18</p>
<p>⑲</p> <p>4</p>	 <p>Hex bolt assembly M8_25</p>	<p>⑳</p> <p>2</p>	 <p>Hex Nut M6</p>
<p>㉑</p> <p>2</p>	 <p>Large washer D6</p>	<p>㉒</p> <p>10</p>	 <p>Button head allen bolts assembly M6_20</p>
<p>㉓</p> <p>1</p>	 <p>Allen Wrench S=6</p>	<p>㉔</p> <p>1</p>	 <p>Allen Wrench S=4</p>

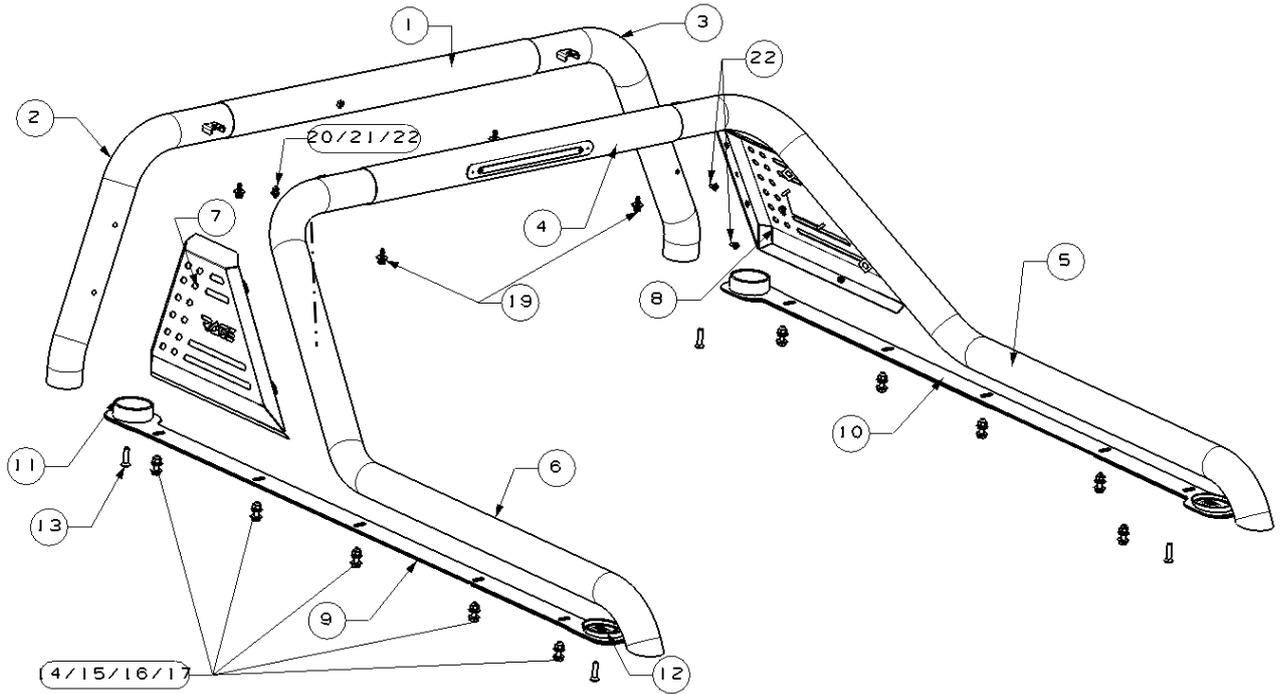


Step 1: Verify that all parts are present according to the manual.

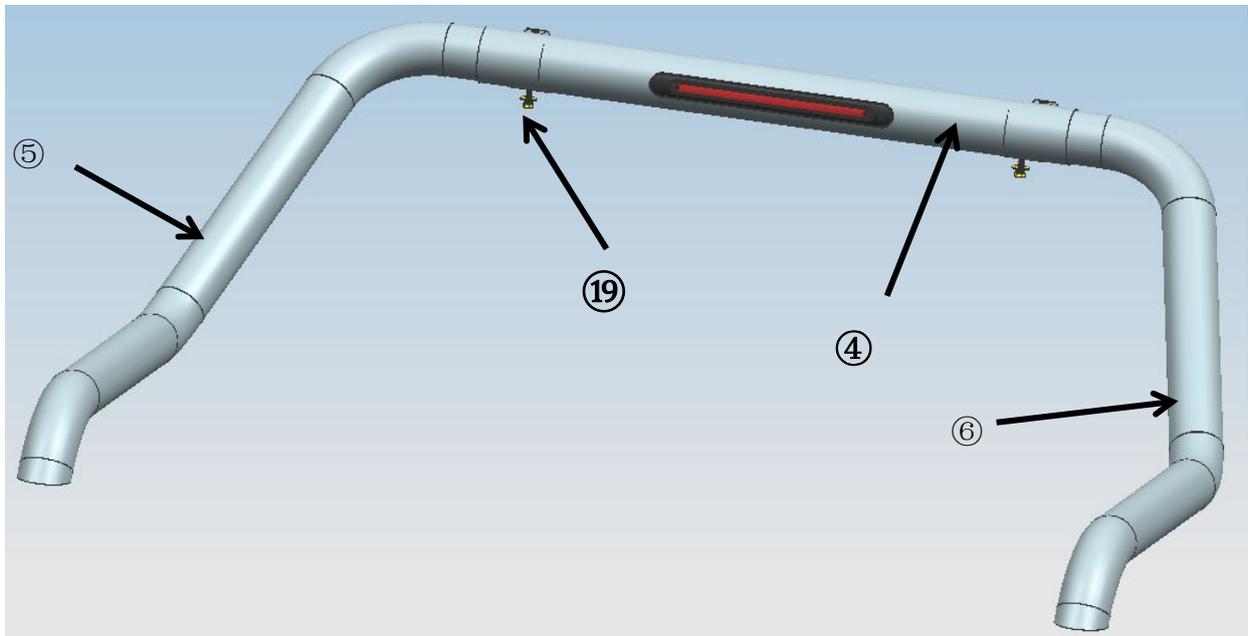Step2: Install ⑤⑥ on ④ by ⑱ as below show:




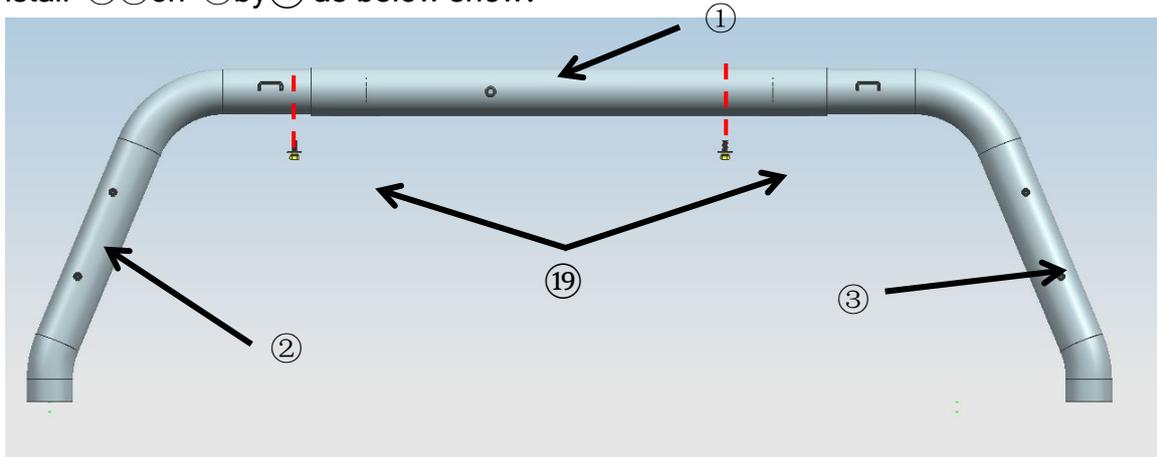Step3: Install ②③ on ① by ⑱ as below show:




Step4: Connect ①④ with the connecting piece and use ⑳ ㉑ ㉒ to install ①④.

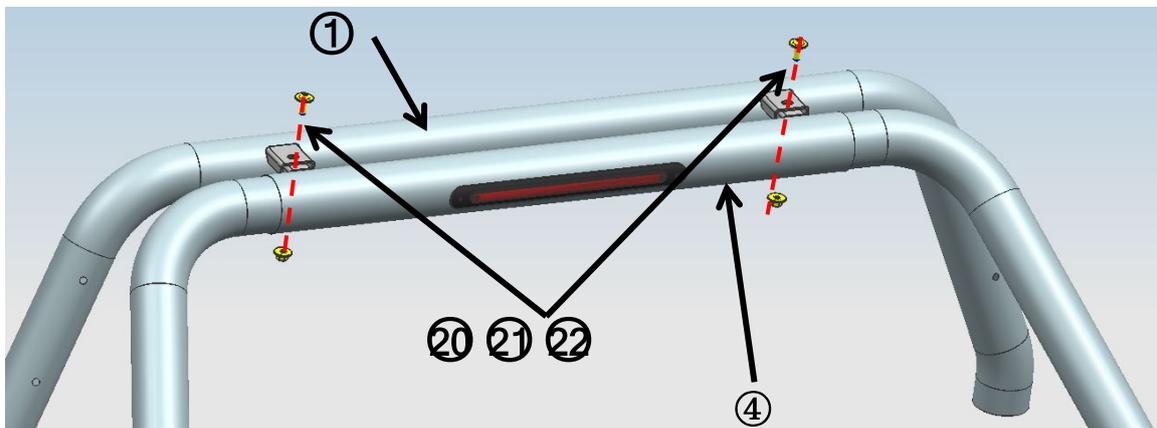
(Note: Do not lock)



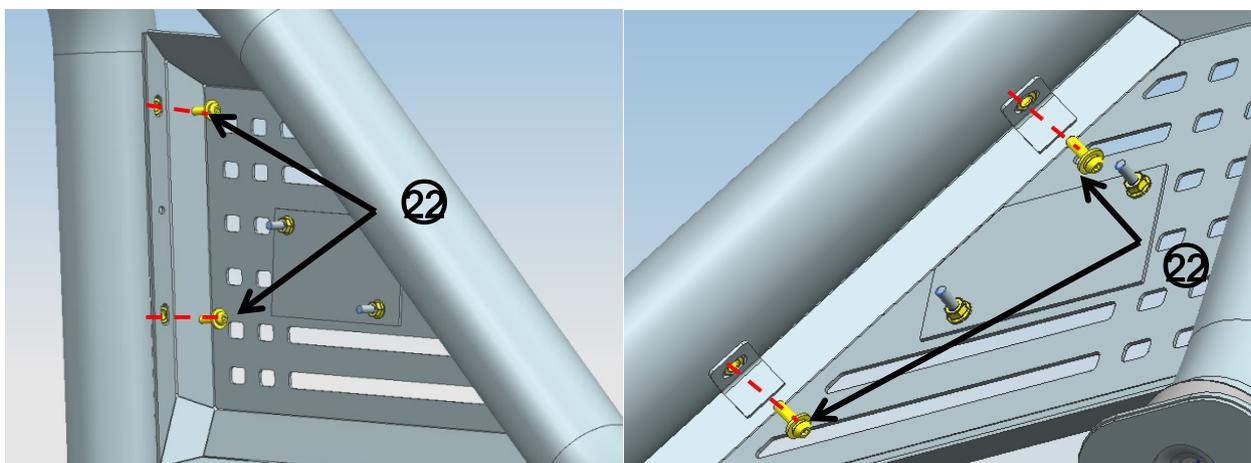
Step 5: Install ㉗ ㉘ on ㉙ ㉚ ㉛ ㉜ by ㉝



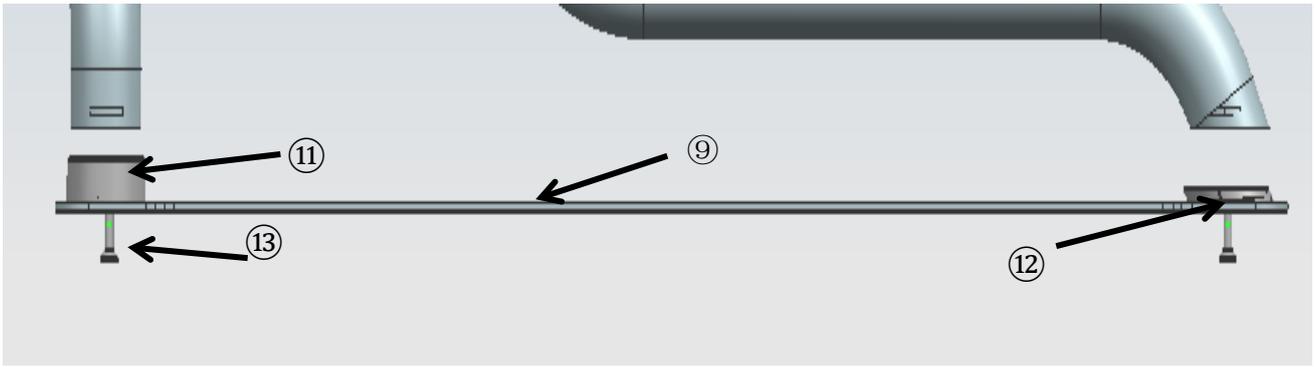
Step 6: Install ㉞ ㉟ ㊱ ㊲ by ㊳ and lock it with the installed bar.



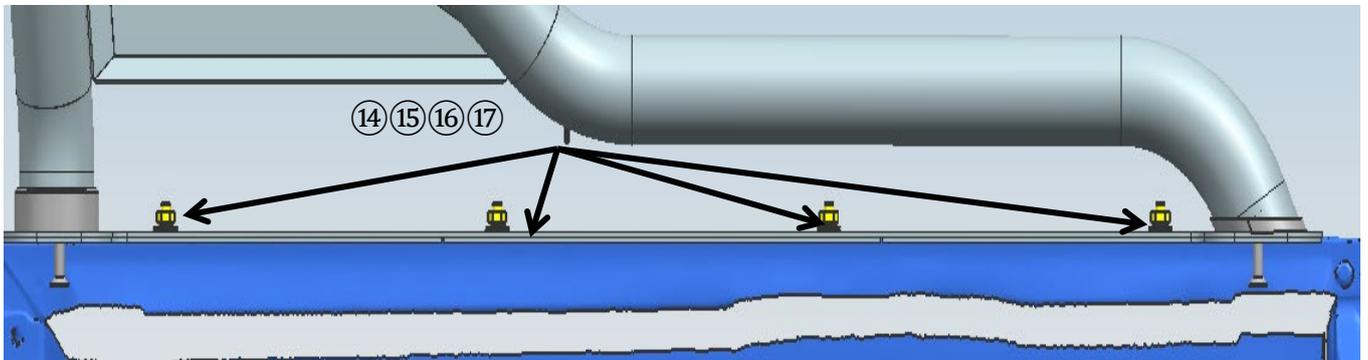Step 7: Place the installed roll bar on the trunk of the truck and adjust it to a suitable position, then use ⑭⑮⑯⑰ to fix ⑨ on the bodywork, and fix and lock the roll bar.



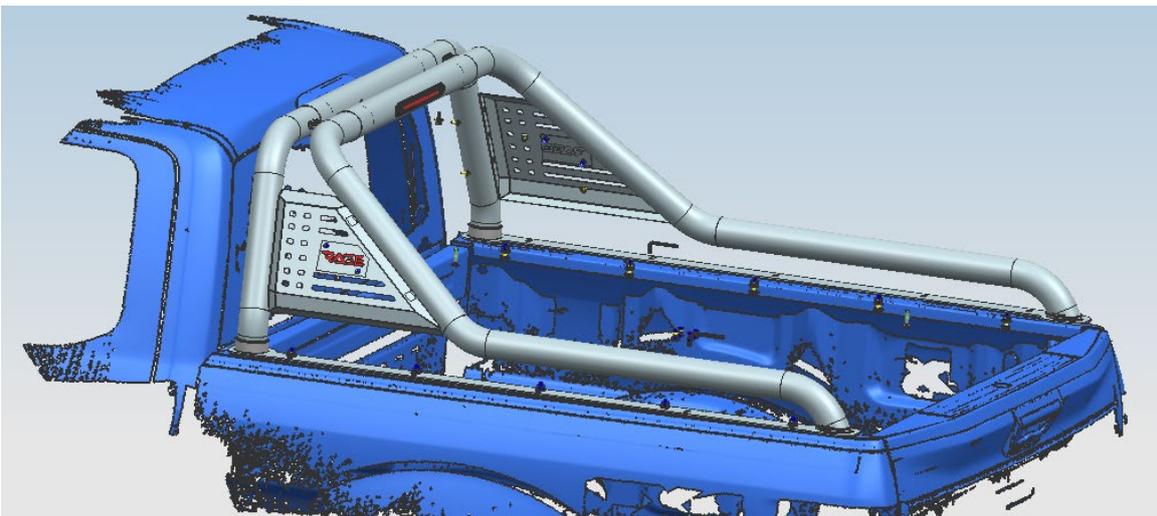Step 8: Complete installation, pick up all tools.



NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.