

SANDY BLACK MT2 ROLL BAR FOR TOYOTA HILUX/FORD RANGER/NISSAN NAVARA

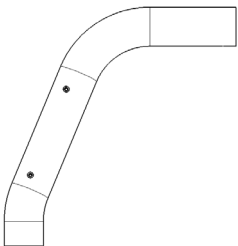
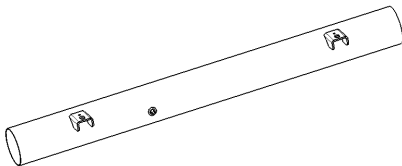
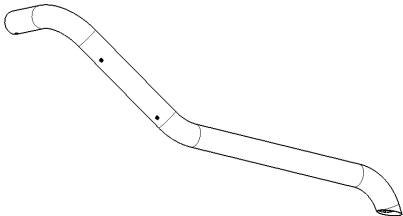


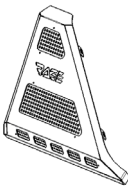
Before Installation

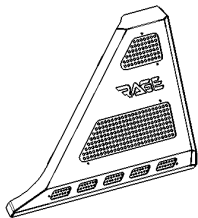
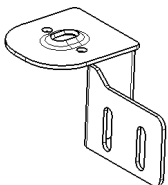
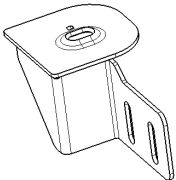
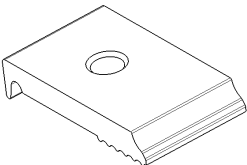
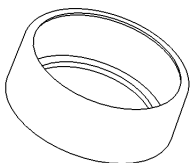


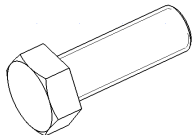







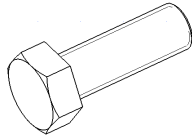
- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The information shown here is for reference only and may differ from the product that you receive, however the goods are fitted in the same way.

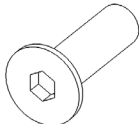





Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	2	 Front Tube (L)(R)	②	1	 Front Central Tube
③	2	 Rear Tube (L)(R)	④	1	 Rear Central Tube
⑤	1	 Central Decoration Plate	⑥	1	 Left Decoration Plate

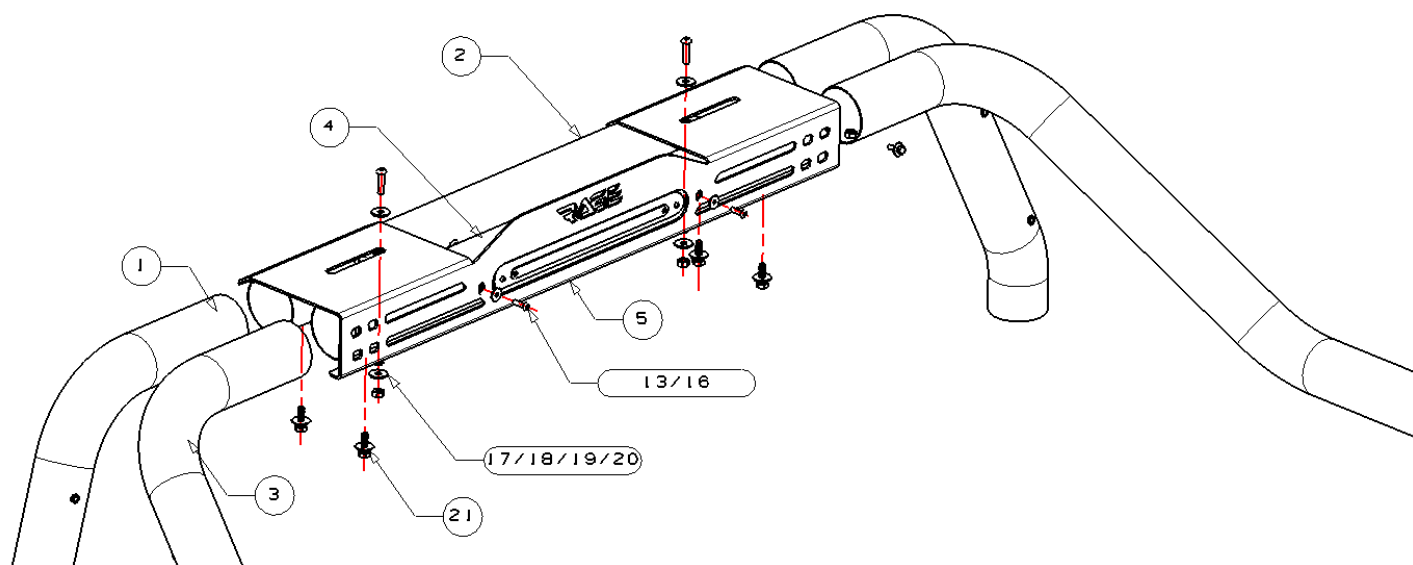
⑦	1	 <p>Right Decoration Plate</p>	⑧	2	 <p>Front Bracket (L)/(R)</p>
⑨	2	 <p>Rear Bracket (L)/(R)</p>	⑩	8	 <p>Support Bracket 2</p>
⑪	2	 <p>Front rubber footing-1</p>	⑫	2	 <p>Rear rubber footing</p>
⑬	2	 <p>Pan Head Screw M6-20</p>	⑭	8	 <p>Hex bolt M6-20</p>
⑮	8	 <p>Spring washer D6</p>	⑯	10	 <p>Large Washer D6</p>
⑰	2	 <p>Pan head Screw M8-30</p>	⑱	2	 <p>Spring washer D8</p>
⑲	4	 <p>Large Washer D8</p>	⑳	2	 <p>Hex nut M8</p>
㉑	4	 <p>Hex head screw and springs Assembly M8-25</p>	㉒	8	 <p>Hex bolt M10-35</p>

(23)	4	 Hexagon Countersunk Head Screws M10-30	(24)	8	 Spring washer D10
(25)	8	 Large Washer D10	(26)	1	 Allen wrench S=4
(27)	1	 Allen wrench S=5	(28)	1	 Allen wrench S=6

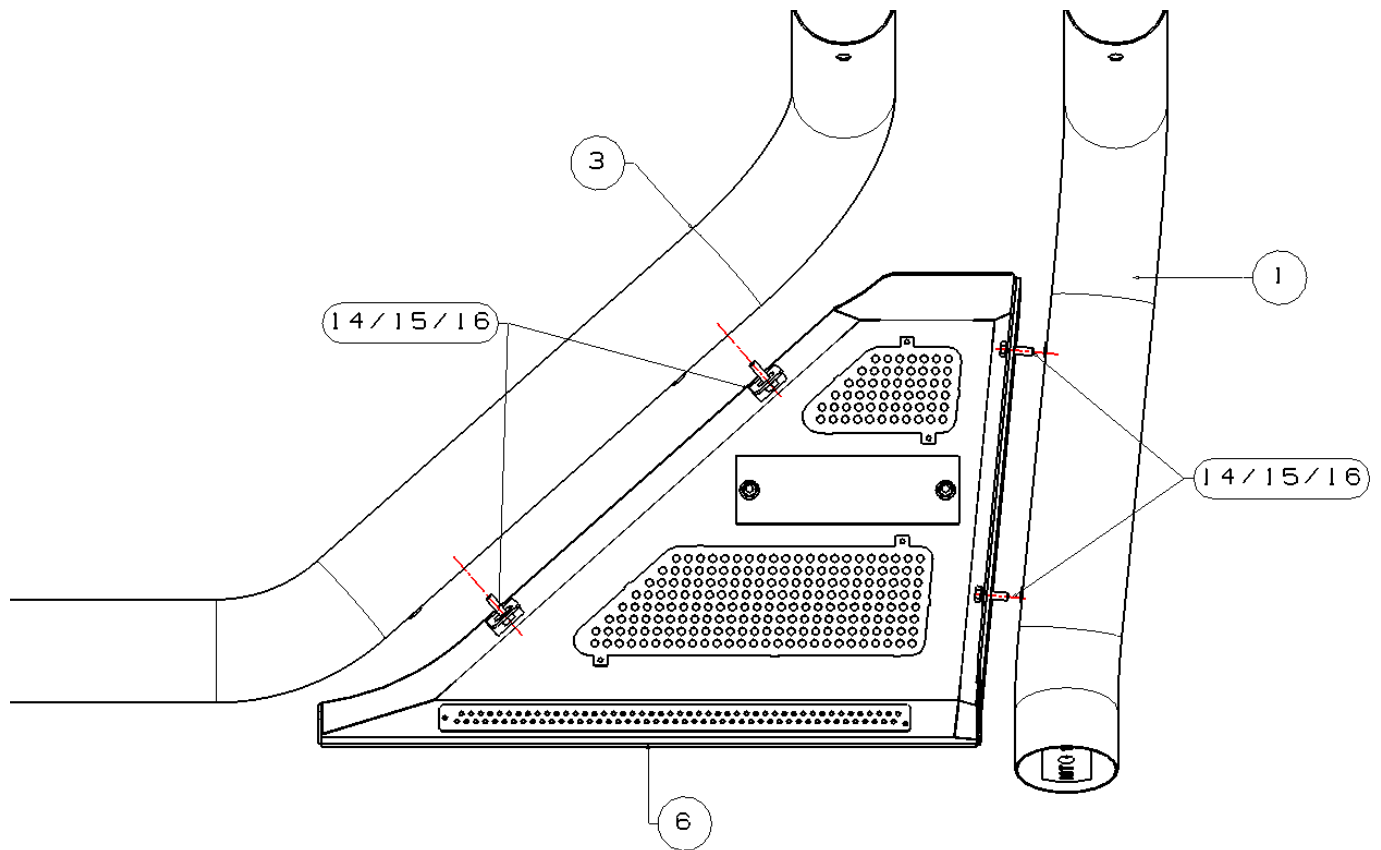
Installation Steps

Installation Fig.

Connect the front tube and rear tube like following.



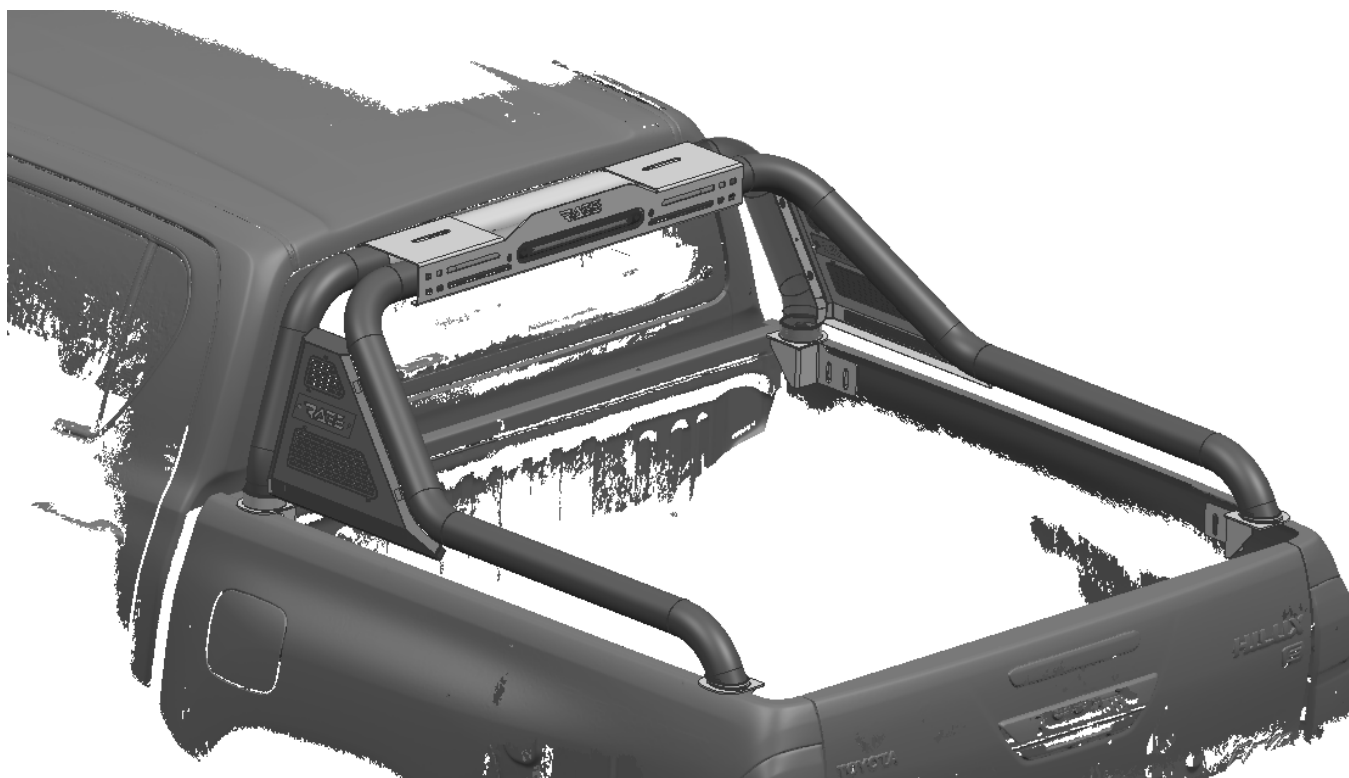
Connect decoration plates with the front tube and rear tube.



Install the roll bar on the vehicle shown as below.



Final Installation



NOTE

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.