

INSTALLATION INSTRUCTIONS

OE STYLE ROLL BAR



Before Installation

- Please read the instruction completely for easy installation, which will also help you to avoid scratches or other potential damages to your appealing car.
- The figures here are for reference only and may have differences with the actual product you received, however they share the same assembly way.




Care and Cleaning

- Mild soap may be used also to clean the Product.
- Please periodically check and retighten all the hardware and clean the investment for a refresh look.

Parts list

NO.	QTY	PICTURE	NO.	QTY	PICTURE
①	1	 Main Tube	②	1	 Plastic cover (L)

INSTALLATION INSTRUCTIONS

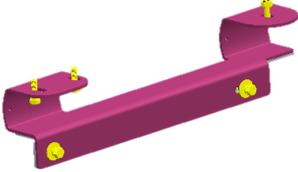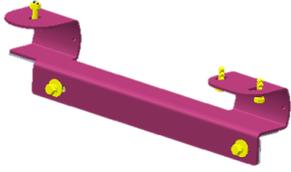

③	1	 Plastic cover (R)	④	2	 Rubber Plug
⑤	2	 Hex bolt M6_20	⑥	2	 Large washer D6
⑦	1	 Metal Base (L)	⑧	1	 Metal Base (R)
⑨	2	 Sponge tape 1	⑩	2	 Sponge tape 2
⑪	8	 Combo kit of hex bolt, spring washer and large washer M8_25	⑫	4	 Flat Head Riveted Nut M8_18
⑬	2	 Hex bolt M8_30	⑭	2	 Spring washer D8
⑮	2	 Large washer D8		1	

Installation Steps




Step 1: Verify all parts are present.

Step 2: Install ① main tube to ② Plastic cover(L) and ③ Plastic cover (R) together with ④ ⑤ ⑥ to the car face as shown in Picture 1.2.

INSTALLATION INSTRUCTIONS

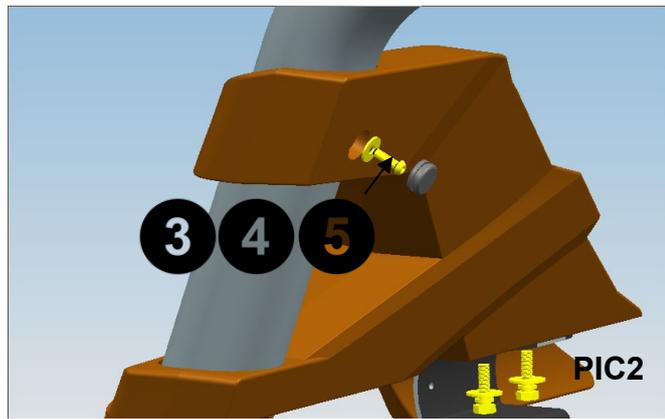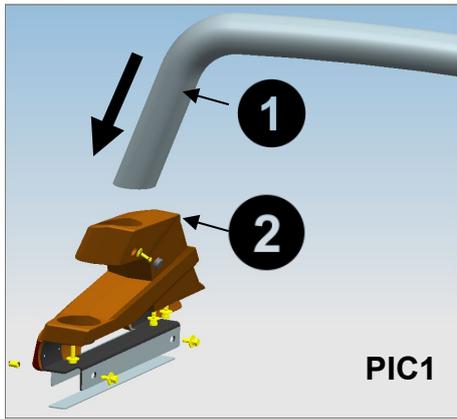


Step 3: Apply (9) (10) sponge tape to (7) (8) Metal Base as shown in Picture 3.

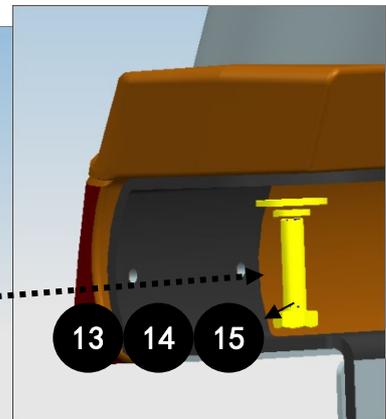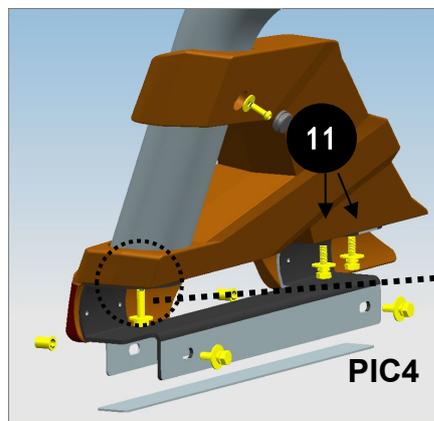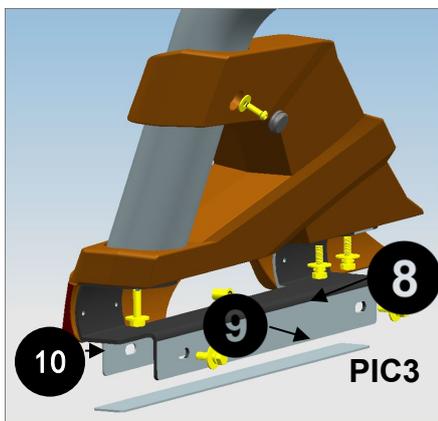

Step 4: Install (7) (8) Metal Base to the main body as shown in Picture 4.

Step 5: Install the whole roll bar to the car body as shown in Picture 5.

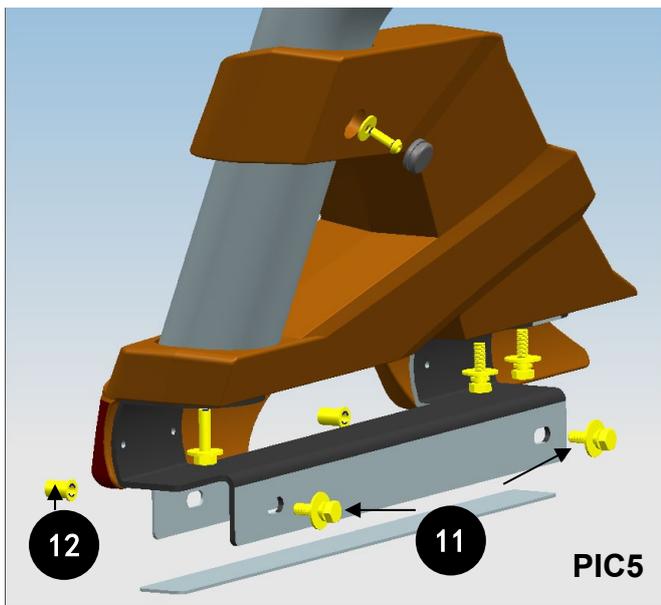

Step 6: Installation Complete. Checking after installation

- Check that the products are located in their proper positions.
- Check that the products are fitted securely.

NOTE

INSTALLATION INSTRUCTIONS

Any damages and losses caused by improper installation and application, goes beyond our quality warranty.